

VTC 5350



SANYO COLOUR VIDEO CASSETTE RECORDER

OWNER'S MANUAL

CONGRATULATIONS. You are now the owner of one of the many fine products manufactured by Sanyo Electric Co., a world-wide leader in electronics. We take pride in our international reputation for product quality and industry proven performance.

This product has been carefully inspected to rigid quality control standards before shipment to you. We are sure you will find that with reasonable care it will provide you with years of reliable performance.

Considering the investment you have made, we know that you will want to obtain the full performance capability engineered into your new Sanyo product. Therefore, may we recommend that you read this owner's manual thoroughly before attempting to operate this instrument.

FEATURES

- * Popular BETA recording format
- * Two color system : PAL, SECAM
- * Three hours 15 minutes recording time with a compact video cassette L-750
- * Built-in preset VHF and UHF tuner
- * Programmable timer enables 1 time of unattended recording within 7 days
- * Soft touch mechanism operation
- * Automatic REWIND at the end of tape
- * Mechanical tape counter with "0000" position memory

CONTENTS

Accessories supplied	2
Caution	2
Installation and connection of the recorder	3
Identification and operation of controls	4
The RF converter	9
The video cassette and its care	9
Setting the clock	
Recording TV programmes	12
Playback of a pre-recorded cassette	14
Recording with a video camera	15
Programmable timer setting	17
Programme read-out and confirmation	18
Recording with the built-in video timer	18
Automatic termination of recording	20
Editing programme materials	20
Automatic rewind system and memory counter	21
Tape erasing	21
Maintenance	22
Trouble shooting	22
Beta-format video cassette recorder specifications	24

ACCESSORIES SUPPLIED


When unpacking your new video cassette recorder, please observe that the following standard accessories are included:

ACCESSORY	QTY.
Antenna output cable	(1)
Video cassette, L-250	(1)
Vinyl dust cover	(1)
Owner's Manual	(1)


Antenna output cable Video cassette Vinyl dust cover

CAUTION

- * Only B video cassettes can be used with this recorder.
- * The SANYO BETACORD Video Cassette Recorder is designed to expand your opportunities for in-home TV viewing and is not intended for any usage which may infringe the rights of others.
- * Do not attempt to open the cabinet. There are no user serviceable parts inside. Refer all servicing to your Sanyo Authorized Dealer. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS PRO-DUCT TO RAIN OR MOISTURE.

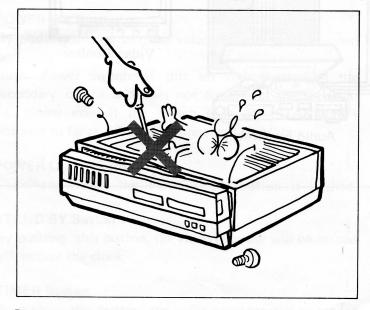

- Pick a convenient location for your video cassette recorder, but avoid using it in extremely hot, cold or dusty places. Allow for air circulation at bottom, top, side and back of unit. The rotary and stationary recording heads are also sensitive to magnetic fields. Take care not to place the recorder near motors, transformers or other equipment which generate strong magnetic fields. This product is designed for use in the horizontal position only.
- * When the recorder is not in use, it is recommended that any video cassete in the unit be ejected. A vinyl dust cover is furnished as a standard accessory to protect your unit from dust and other contaminants.

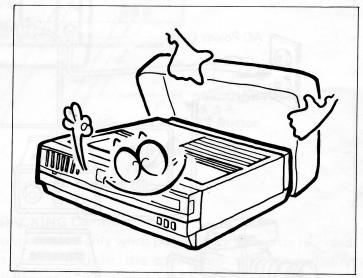


* POWER SYSTEM

This VCR can be operated on a power supply of either AC 110 \sim 127 V or AC 220 \sim 240 V.


Set the VOLTAGE SELECTOR (refer to page 8) to the appropriate position by using a flat-tipped screwdriver.

"H": Set the selector to this position if the power supply voltage is AC 220 \sim 240 V.

"L": Set the selector to this position if the power supply voltage is AC 110 \sim 127 V.

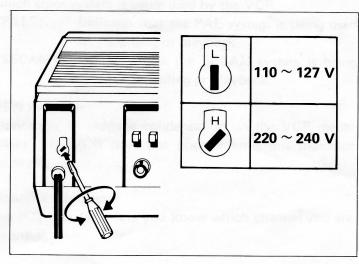


INSTALLATION AND CONNECTION OF THE RECORDER

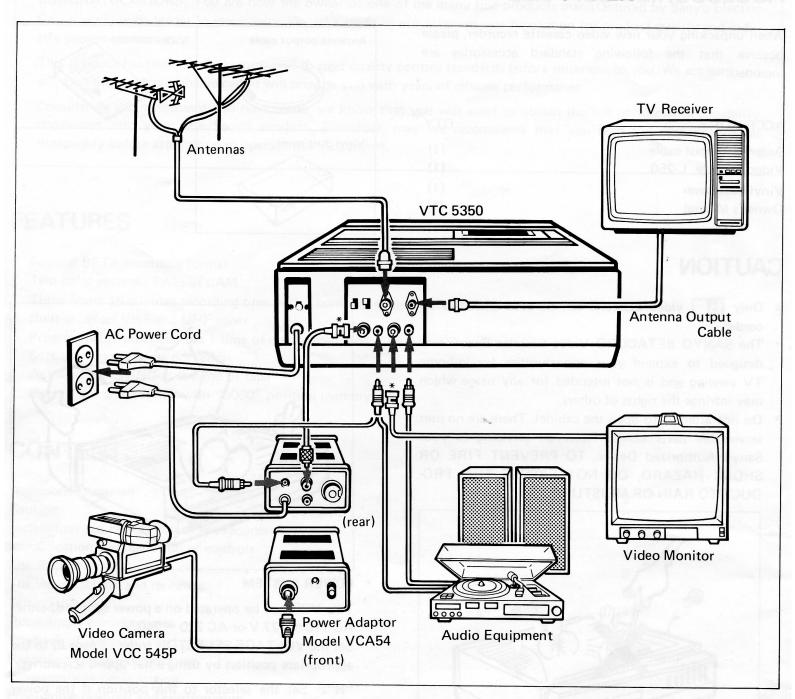

Note: This video input and output connectors are BNC type.

IDENTIFICATION AND OPERATION OF CONTROLS (A)

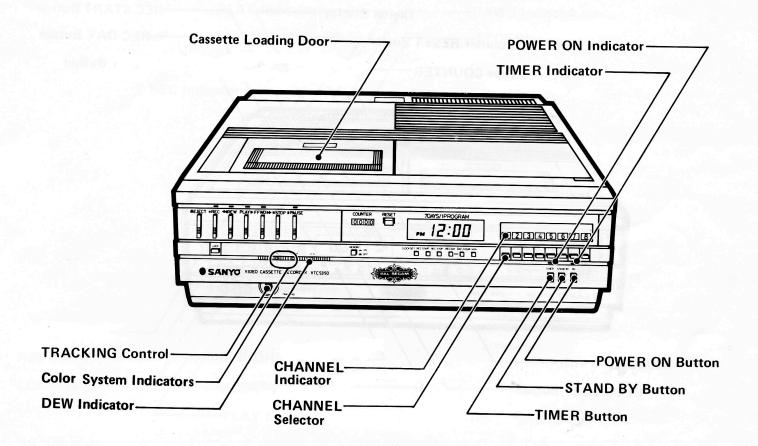

POWER ON Button

By pushing this button, the video recorder will be turned on.

Note: Power switch of this set is connected in the secondary circuit and does not disconnect the set from AC power even if the switch is in off (STAND BY) position so far as AC cord is connected to AC line.

POWER ON Indicator

Illuminates when the POWER ON button is pushed.

STAND BY Button

By pushing this button, the video recorder will be turned off, except the clock.

TIMER Button

By pushing this button, the video recorder will be set for timer recording. It will turn on and off automatically.

TIMER Indicator

Illuminates when the TIMER button is pushed.

Cassette Loading Door

Accepts video cassette for automatic tape loading. To open the door for cassette loading push the EJECT button. The cassette should be inserted into the door in the direction indicated by the arrow on the cassette. The cassette should be pushed in the cassette door as far back as it goes and the door closed by pushing it down firmly. Approximately 4 seconds are required for tape loading.

TRACKING Control

Normally used only when playing back a cassette recorded on another recorder, this control provides a compatibility adjustment of video head tracking for noise-free pictures. Should tracking noise (a narrow horizontal noise pattern across the picture) be observed, adjust tracking by rotating the TRACKING control to the right or left.

The TRACKING control should be kept in the mid (notch) position when playing back cassettes recorded on the same machine.

Color System Indicators

These indicators illuminate, as described below, to show which color system is being used by the VCR.

"PAL":

Indicates that the PAL system is being used

for recording or playback.

"SECAM":

Indicates that the SECAM system is being

used for recording or playback.

DEW Indicator

Illuminates to indicate condensation on the VCR mechanism. The VCR does not operate until this indicator turns off.


CHANNEL Indicator

The indicator lamp lets you know which channel you are recording.

CHANNEL Selector

8 different TV stations can be stored and be individually recalled by pressing channel selector knobs.

IDENTIFICATION AND OPERATION OF CONTROLS (B)

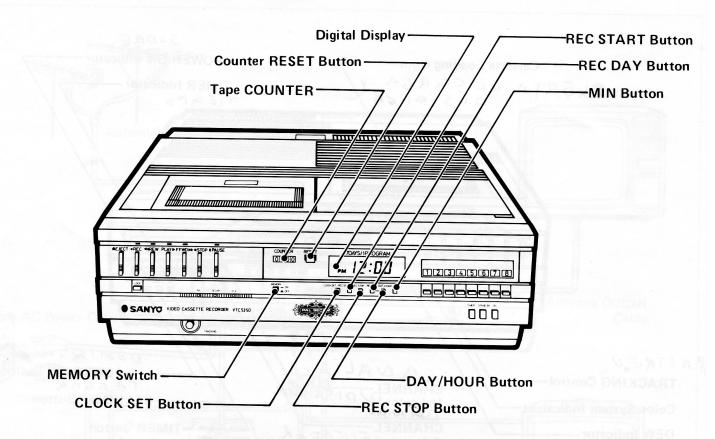

Digital Display

Indicates the time of the day. When the REC START button is depressed, it indicates the starting time of automatic recording. When the REC STOP button is depressed, it indicates the ending time of automatic recording. When the REC DAY button is depressed, it indicates the day of automatic recording.

CLOCK SET Button

When the main lead is connected, digits "AM 12:00" will appear and begin to flash.

First, set the clock time precisely by pressing the CLOCK SET button together with the DAY/HOUR or MIN button.

REC START Button

While pressing this button, push the DAY/HOUR or MIN button to set the starting time of automatic recording.

REC STOP Button

While pressing this button, push the DAY/HOUR or MIN button to set the ending time of automatic recording.

REC DAY Button

While pressing this button, push the DAY/HOUR button to set the day of automatic recording.

DAY/HOUR Button

While pressing the CLOCK SET, REC START or REC STOP button, push lightly the DAY/HOUR button one time, then the clock or timer indicator will move by one hour. Keep the DAY/HOUR button pressed, the display will change with a speed of 4 hours per second.

While pressing the REC DAY button, push lightly the DAY/HOUR button one time, then the day of automatic recording will move by one day. Keep the DAY/HOUR button pressed, the display will change with a speed of three days per second.

MIN Button

While pressing the CLOCK SET, REC START or REC STOP button, push lightly the MIN button one time, then the clock or timer indicator will move by one minute. Keep the MIN button pressed, the display will change with a speed of 8 minutes per second.


Tape COUNTER

Indicates tape position. Used to locate a particular point on the tape.

Counter RESET Button

Press to reset the COUNTER to "0000".

IDENTIFICATION AND OPERATION OF CONTROLS (C)

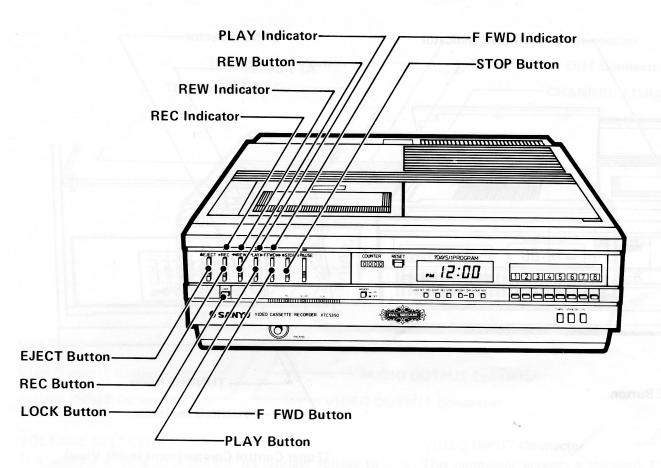

EJECT Button

Opens the cassette loading door to permit loading and unloading of the cassette. Cassettes may be ejected at anytime during the programme without rewinding for fast cassette change-over.

REC Button

After the cassette has been loaded, when pressing respectively the lock button and the record button, the REC indicator lights and recording starts. If the video cassette's tab has been removed, the REC indicator flashes to indicate that the video recorder cannot be set to recording mode.

REC Indicator

Illuminates when the video recorder is in record mode.

LOCK Button

The REC button does not operate the video recorder even if it is pushed independently. It operates only when pushed along with the LOCK button. If the REC button is pushed by mistake, the video recorder is not set to record mode preventing the erase of the tape. The LOCK button works about one second after it has been pushed and released. The REC button needs not to be pushed simultaneously — all what has to be done is to push it within one second after the LOCK button has been released.

REW Button

When this button is pushed, the REW indicator lights and the tape is rewound at high speed.

REW Indicator

Illuminates when the video recorder is in the REW mode.

PLAY Button

When this button is pushed, the PLAY indicator lights and the prerecorded video cassette is played back.

PLAY Indicator

Illuminates when the video recorder is in the PLAY mode.

F FWD Button

When this button is pushed, the F FWD indicator lights and the tape is sent forward at high speed.


F FWD Indicator

Illuminates when the video recorder is in the F FWD mode.

STOP Button

When this button is pushed during operation, the tape stops running and all the functions are interrupted.

IDENTIFICATION AND OPERATION OF CONTROLS(D)

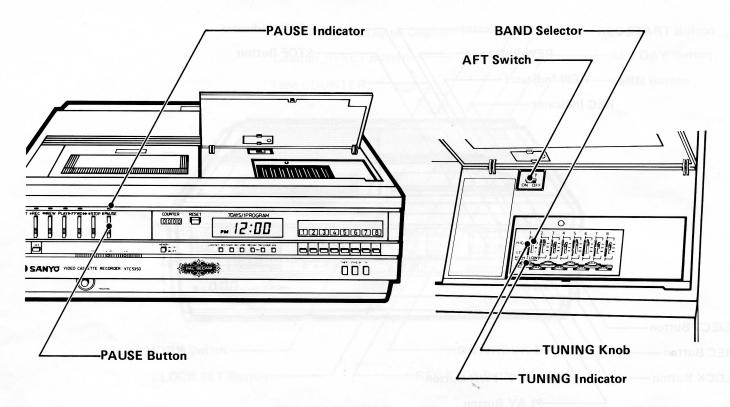

(Tuner Control Compartment Inside View)

PAUSE Button

When this button is pushed, the PAUSE indicator flashes and the tape stops running. If it is pushed during recording, the video recorder is set to pause mode, it is then possible to cut out commercials and other unnecessary parts of the programme. When this button is pushed again, the video recorder returns to recording mode. If the PAUSE button is pushed during playback, the sound is muted and a still picture (black and white) appears. When this button is pushed again, the video recoder returns to playback mode.

PAUSE function should not be used for more than three minutes at a time.

Note: If the video recorder is kept in PAUSE mode for about 5 minutes, it is automatically turned off in order to protect the tape.

PAUSE Indicator

Flashes when the video recorder is in PAUSE mode.

AFT Switch

This switch electronically maintains the best fine tuning. It should be at the "ON" position except when the fine tuning is being adjusted (by using the tuning controls).

BAND Selector

Allows to select the desired band:

I: Channel 2 to Channel 4

III: Channel 5 to Channel 12

U: Channel 21 to Channel 69


TUNING Knob

When the corresponding channel selector has been pressed, the desired TV station can be tuned.

TUNING Indicator

Each channel band is indicated. Turning the tuning knob, the tuning indicator moves accordingly.

IDENTIFICATION AND OPERATION OF CONTROLS (E)

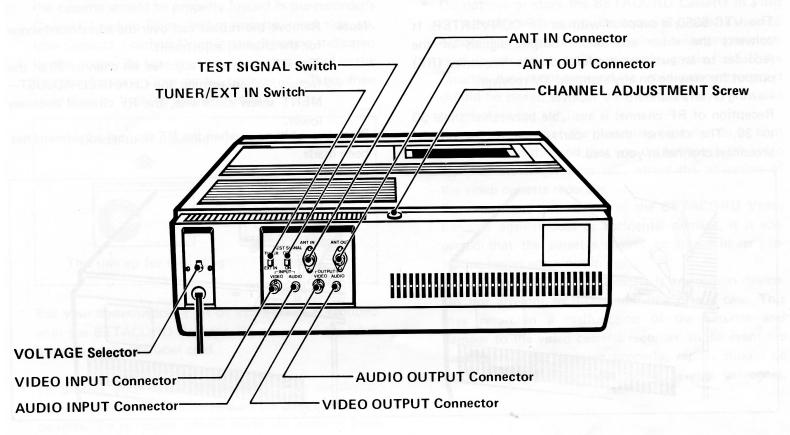

VOLTAGE SELECTOR

This selector is used to select the appropriate voltage to correspond to the available power supply. Set the selector to either the "H" position or the "L" position by using a flat tipped screwdriver.

"H": This position should be used if the VCR is to be operated on a power supply voltage of AC 220 \sim 240 V.

"L": This position should be used if the VCR is to be operated on a power supply voltage of AC 110 \sim 127 V.

TUNER/EXT IN Switch

Provides convenient selection of the video and audio sources to be recorded.

TUNER: Video and audio from the tuner section. (Channel indicator illuminates.)

EXT IN: External video and audio input from the VIDEO INPUT and AUDIO INPUT connectors. (Channel indicator does not illuminate.)

TEST SIGNAL Switch

Turn the test signal switch to "ON" position, a black and white pattern is displayed on the TV screen.

Adjust the channel tuning of the TV receiver until the best pattern appears.

ANT IN Connector

Aerial lead from Antenna should be connected to this 75 ohm input.

ANT OUT Connector

75 ohm connector cable should be connected to this output. Opposite end of cable connected to the Antenna connector of the television. (Standard Accessory).

VIDEO INPUT Connector

This connector accepts a standard 1.0 volt p-p, 75 ohm video signal from a camera or other video source for recording. Use a coaxial cable with a BNC type plug for this connection. The VIDEO INPUT connector can be used when the TUNER/EXT IN switch is turned to the EXT IN position.

AUDIO INPUT Connector

This phonojack accepts 0.24 volt r.m.s., high impedance audio signal from an audio mixer or other source for recording. Use a coaxial cable with a phonoplug for this connection.

VIDEO OUTPUT Connector

The video signal being recorded or played back is available at this connector for monitoring. The output level is 1.0 volt p-p into 75 ohms. Use a coaxial cable with a BNC type plug for this connection.

AUDIO OUTPUT Connector

The audio signal being recorded or played back is available at this phonojack for monitoring. The output level is 0.44 volt r.m.s., 10k. Use a coaxial cable with a phonoplug for this connection.

CHANNEL ADJUSTMENT Screw

RF output channel is correctly adjusted to UHF channel 36 at the factory, therefore it is recommended to use this channel

If the channel 36 is in use by a commercial television station in your area, select one of the unused broadcast channels 30 to 39 on the TV.

-8-

THE RF CONVERTER


The VTC 5350 is supplied with an RF CONVERTER. It converts the video and audio output signals of the recorder to an auxiliary modulated ratio frequency (RF) output for viewing on any standard TV receiver. viewing on any standard TV receiver.

Reception of RF channel is available between channel 30 to 39. The channel should correspond to the unused broadcast channel in your area.


Note: Remove the rubber cap over the adjustment screw for the channel adjustment.

The RF channel is adjusted on channel 36 at the factory. When turning the CHANNEL ADJUST—MENT screw clockwise, the RF channel becomes lower.

Place the rubber cap when the RF channel adjustment has been made.

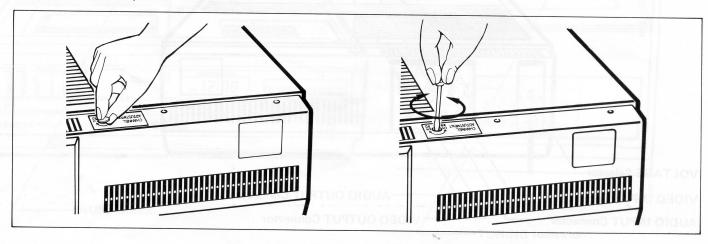

THE VIDEO CASSETTE AND ITS CARE

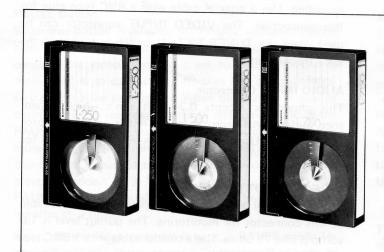

Recording & playback time L-250: 65 minutes

L-500 :130 minutes

L-750 :195 minutes


Dimensions: 96 (W) x 25(H) x 156(D) mm

The Sanyo BETACORD Video Cassette is a precision engineered twin reel cassette containing high performance video recording tape. Designed for use with Sanyo BETACORD Video Cassette Recorder/Player, the BETA—CORD Cassette provides both the convenience of automatic tape loading and protection of valuable recorded contens. With reasonable care, you may expect many hours of high quality video programme enjoyment.

HOW TO USE THE BETACORD CASSETTE


* Like an audio cassette, the BETACORD Cassette may be re-recorded many times. However, unlike an audio cassette, the BETACORD Cassette can be recorded in one direction only, since the full width of the video tape is used to record picture and sound.

To start the operation of your BETACORD Recorder, the cassette should be properly loaded in the recorder's Cassette Loading Door. Insert cassette, label side up, into Cassette Loading Door in the direction indicated by the arrow. Be sure that the cassette is seated in the Cassette Loading Door as far back as it will go, then close door by pushing it down firmly.

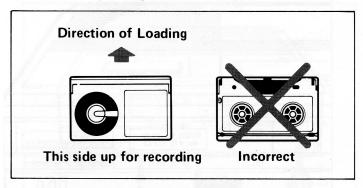

For your convenience, a set of index labels is included with the BETACORD Cassette. Placement of the label is indicated on the label card.

To protect your valuable recordings from accidental erasure, remove the tab located on the back side of the cassette. To re-record, simply cover the opening from which the tab was removed with adhesive tape.

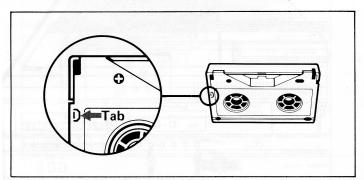


CARE OF THE BETACORD CASSETTE


- * Do not use or store the BETACORD Cassette in a hot or humid environment. Be especially careful not to expose it to direct sunlight, heating equipment or electrical devices which emit a strong magnetic field. If the cassette has been exposed to cold temperatures, it should be stored at room temperatures for at least one hour before use.
- * It is important that the protective tape shutter be kept closed at all times and that you do not touch the video tape, as the fingerprints may affect the operation of the video cassette recorder.
- * For maximum protection of the BETACORD Video Cassette against dust or accidental damage, it is suggested that the cassette always be stored in its protective jacket when not in use.
- * The BETACORD Video Cassette is a precision device. Do not attempt to disassemble the plastic case. This may result in a malfunction of the cassette and damage to the video cassette recorder. In the event the cassette fails to function properly, repairs should be made only by Sanyo authorized service personnel.

SETTING THE CLOCK


1. When connecting the video recorder to the mains, the time display will start to flash "AM 12:00".

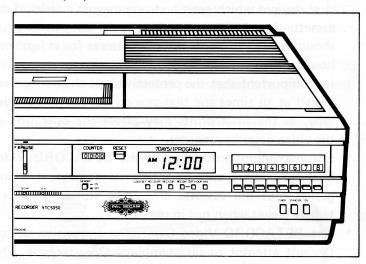


Push the POWER ON button.Observe that the POWER ON indicator illuminates.

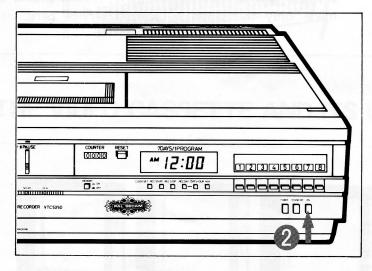


3. While you keep the CLOCK SET button depressed, push the MIN button until the minute indicator reaches about "XX:50".

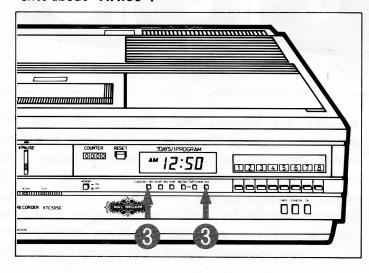

4. While pressing the CLOCK SET button, push the MIN button one by one until the minute indicator reaches "XX:00", the clock will start to count from "0" second.

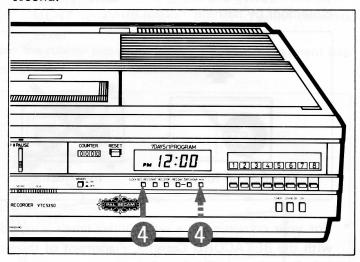

5. While pressing the CLOCK SET button, push the DAY/HOUR button until the hour indicator reaches the correct hour.

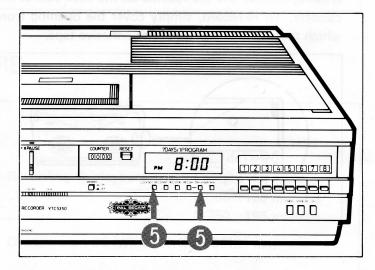

Note: The hour and minute indicator change automatically when the DAY/HOUR or MIN buttons are pressed for more than 2 seconds. The hour and minute indication will change by 1 digit every time these knobs are pressed.


(POWER FAILURES)

If the mains power is interrupted, the time display will stop to indicate. When the mains power is restored the display will flash "AM 12:00". Set the clock according to "SETTING THE CLOCK".


RECORDING TV PROGRAMMES

A. POWER ON

- 1. Push the POWER ON button.
- 2. Observe that the POWER ON indicator illuminates.

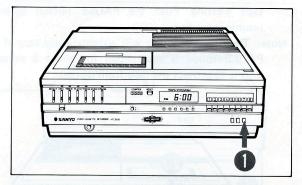


B. CHECK THE SWITCHES

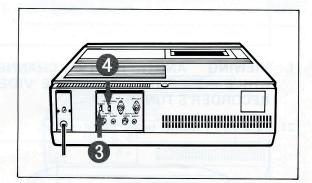


C. SET THE TV RECEIVER

- 5. Set the power switch to "ON" position.
- At first set the TV channel around 36 (the RF output channel is preset on 36 at the factory) and carefully adjust the channel to get the black and white test signal pattern on the TV screen.
- 7. TEST SIGNAL switch to "OFF" position.

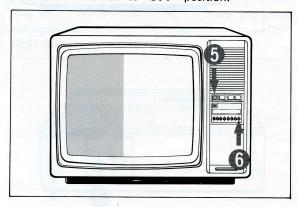


D. ADJUST THE TV PROGRAMMES ON THE VIDEO RECORDER

- 8. Open the tuner compartment cover.
- 9. Press the channel selector No. 1.
- 10. Set the AFT switch to "OFF" position.
- 11. Set the band selector "1" to the desired band.
- 12. By using the tuning knob "1" tune the first desired TV station until the best picture is obtained.
- 13. Press the channel selector No. 2 and proceed in the same way as for the first station. Repeat it until all stations are stored.
- 14. Set the AFT switch to "ON" again for automatic frequency control.

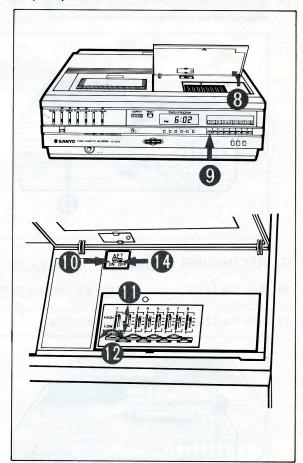


E. LOADING THE VIDEO CASSETTE

- 15. Push the EJECT button.
- Insert a video cassette into the cassette loading door and close the door. The tape is automatically loaded.

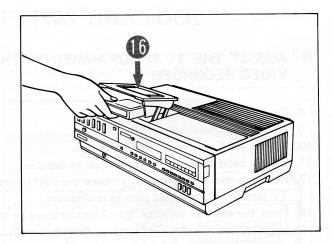


F. PROGRAMME MONITORING

Using the recorder's built-in tuner, adjust the TV channel to be recorded.

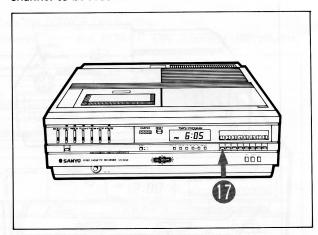

G. RECORDING

- 18. Push the LOCK button and the REC button to start recording.
- 19. Push the STOP button to end a recording.

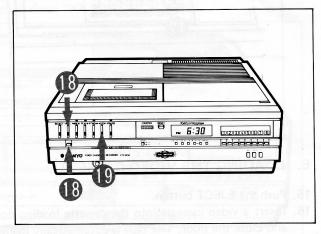


H. PROGRAMME EDITING


 To edit out unwanted programme during recording, push the PAUSE button. Observe that the PAUSE indicator flashes to indicate "pause".

Please note that the PAUSE mode should not be kept more than three minutes in order to avoid unnecessary tape wearing. Push the PAUSE button again to resume recording.

Note: The video recorder will automatically stop if the PAUSE mode is maintained for about 5 minutes. This is to protect the tape from damage.

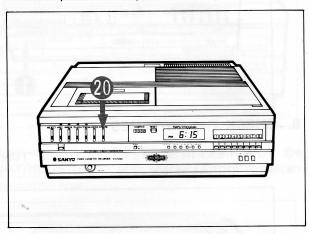


- I. VIEWING ANOTHER TV CHANNEL WHILE RECORDING FROM THE VIDEO RECORDER'S TUNER
- 21. Tune the TV receiver to the desired channel.

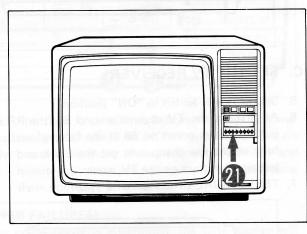


PLAYBACK OF A PRE-RECORDED CASSETTE

A. POWER ON

- 1. Push the POWER ON button.
- 2. Observe that the POWER ON indicator illuminates.

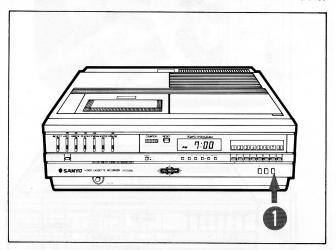


B. CHECK THE SWITCH

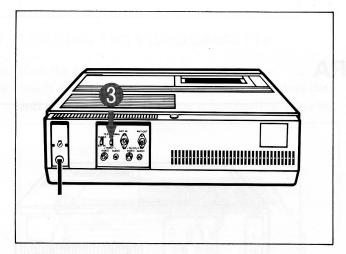


C. SET THE TV RECEIVER

- 4. Set the power switch to "ON" position.
- 5. At first set the TV channel around 36 (the RF output channel is preset on 36 at the factory) and carefully adjust the channel to get the black and white test signal pattern on the TV screen.
- 6. TEST SIGNAL switch to "OFF" position.

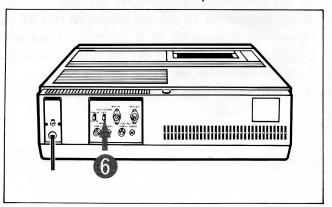


D. LOADING THE VIDEO CASSETTE

- 7. Push the EJECT button.
- 8. Insert a pre-recorded cassette into the loading door and close the door. The tape is automatically loaded.

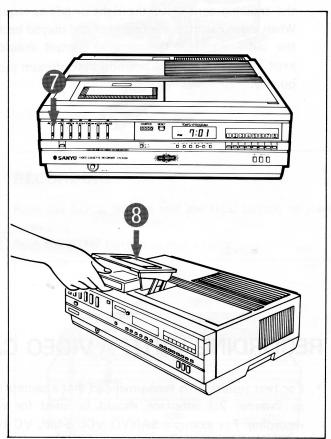

E. PLAYBACK VIEWING

9. Push the PLAY button.

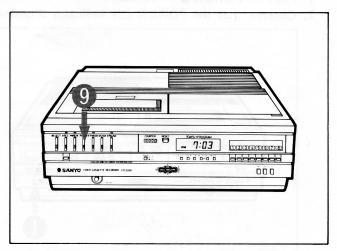

F. TRACKING ADJUSTMENT

10. Adjustment of the video head tracking is normally required only when playing back video cassettes recorded on another recorder. Mistracking is indicated when a narrow band of horizontal noise appears in the picture as shown in the illustration. In this case, a perfect noise-free picture may be obtained by rotating the tracking control to the right or left as required. When video cassettes are recorded and played back on the same machine, the tracking control should be kept in the mid (notch) position for optimum picture quality.




RECORDING WITH A VIDEO CAMERA

* For best results, it is recommended that a camera with an internal 2:1 interlace should be used for video recording. For example SANYO VCC 545P, VC 1400.


A. POWER SWITCH ON

- 1. Push the POWER ON button.
- 2. Observe that the POWER ON indicator illuminates.

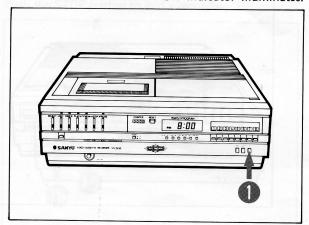


B. CHECK THE SWITCHES

3. TUNER/EXT IN switch							"EX	T	IN'	,
4. TEST SIGNAL switch .								"()N'	,

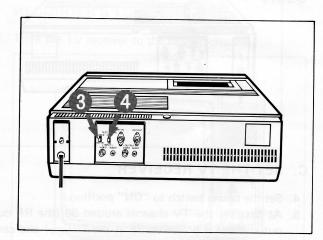


C. SET THE TV RECEIVER

- 5. Set the power switch to "ON" position.
- At first set the TV channel around 36 (the RF output channel is preset on 36 at the factory) and carefully adjust the channel to get the black and white test signal pattern on the TV screen.
- 7. TEST SIGNAL switch to "OFF" position.

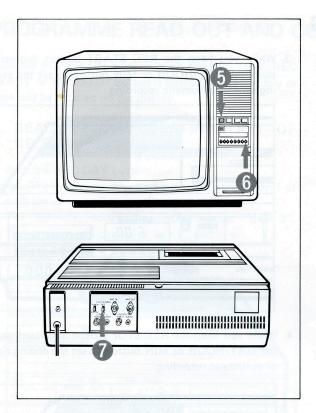


D. LOADING THE VIDEO CASSETTE

- 8. Push the EJECT button.
- Insert a video cassette into the cassette loading door and close the door. The tape is automatically loaded.

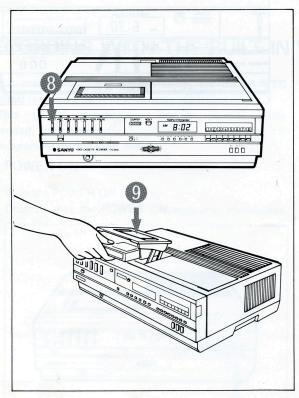


E. MONITORING

10. Adjust the camera for the best picture.

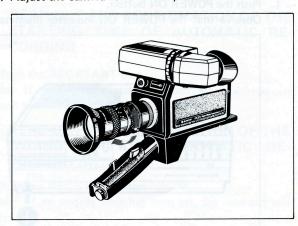


F. RECORDING

- 11. Push the LOCK button and the REC button to start recording.
- 12. Push the STOP button to end a recording.

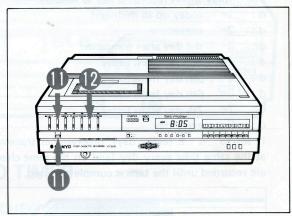

PROGRAMMABLE TIMER SETTING

Push the POWER ON button.
 Observe that the POWER ON indicator illuminates.

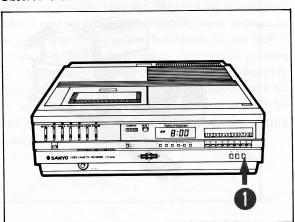


While you keep the REC DAY button depressed, push the DAY/HOUR button to set the day of automatic recording.


The display shows recording day as follows:

- d: 1= today up to midnight
- d: 2= tomorrow
- d: 3= the day after tomorrow
- d: 4= 4th day from today
- d: 5= 5th day from today
- d: 6= 6th day from today
- d: 7= 7th day from today
- d: E= every day


If set to d: E (every day), programmes transmitted at the same time every day (and on the same channel) are recorded until the tape is completely used.

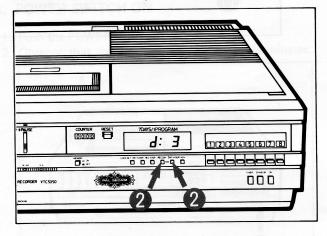

While you keep the REC START button depressed, push the DAY/HOUR or MIN button to set the starting time of automatic recording.

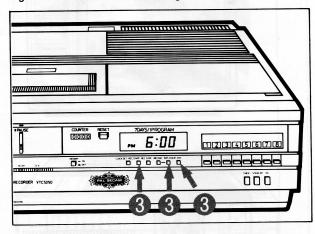

 While you keep the REC STOP button depressed, push the DAY/HOUR or MIN button to set the ending time of automatic recording.

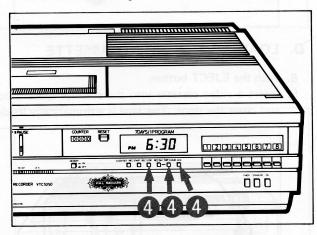

PROGRAMME READ-OUT AND CONFIRMATION

Push the POWER ON button. When the REC DAY, REC START or REC STOP button is pushed, the preset day or time will be recalled on the display.


A. READ-OUT AND CONFIRMATION OF RECORDING DAY

Push the REC DAY button.

Note: The recording day read-out will decrease by 1 at each day.

For example, today the display shows "d: 3". Tomorrow it will change to "d: 2" and so on.

("d: 1" and "d: E" do not change.)

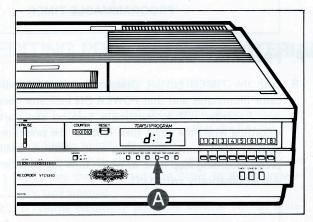

B. READ-OUT AND CONFIRMATION OF THE STARTING TIME OF AUTOMATIC RECORDING


Push the REC START button.

Note: If no starting time has been set, the read-out will be "-:--".

C. READ-OUT AND CONFIRMATION OF THE ENDING TIME OF AUTOMATIC RECORDING

Push the REC STOP button.

Note: If no ending time has been set, the read-out will be "-:--".

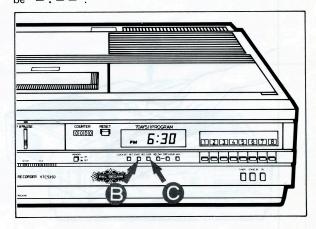


RECORDING WITH THE BUILT-IN VIDEO TIMER

* For maximum recording flexibility, the model VTC 5350 features a built-in electronic recording timer. This special convenience feature permits unattended, fully automatic recording of a pre-selected TV programme during your absence.


A. POWER ON

- 1. Push the POWER ON button.
- 2. Observe that the POWER ON indicator illuminates.

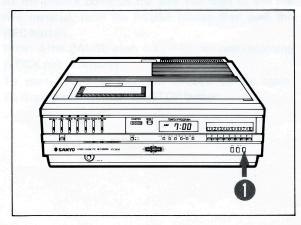


B. CHECK THE SWITCH

3. TUNER/EXT IN switch "TUNER"

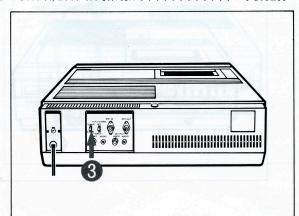


C. LOADING THE VIDEO CASSETTE

- 4. Push the EJECT button.
- Insert a video cassette into the loading door and close the door. The tape is automatically loaded.

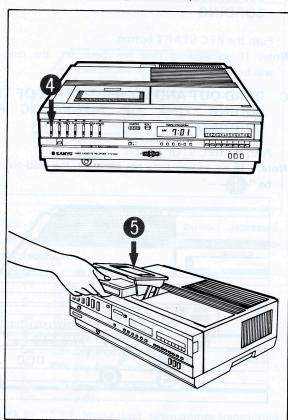


D. CHANNEL SETTING

6. Push the selector of the desired channel.

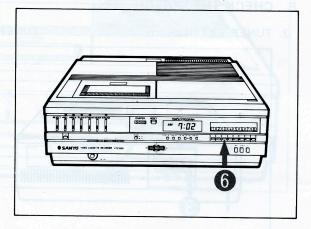


E. SETTING THE PROGRAMMABLE TIMER

Set the programmable timer, refer to the section titled "PROGARAMMABLE TIMER SETTING".

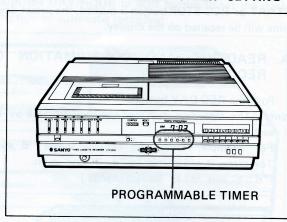

F. PREPARATION OF RECORDING


8. Push the TIMER button. Observe that TIMER indicator illuminates and that POWER ON indicator goes out. Recorder will automatically turn on and start recording when the clock time reaches the preset recording start time. Recording will continue until preset recording stop time, at which time the recorder will automatically switch off.

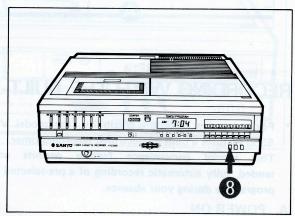

AUTOMATIC TERMINATION OF RECORDING

Under certain circumstances, such as when retiring for the night, it may be convenient to start the recording function manually and set the recorder to automatically switch-off at the end of the tape.


- Refer to the section titled "RECORDING TV PRO-GRAMMES" and follow all procedures.
- 2. Push the TIMER button and set the power switch of the TV receiver to the "OFF" position.
- Recording will continue to the end of tape, at which time the recorder will automatically switch-off.

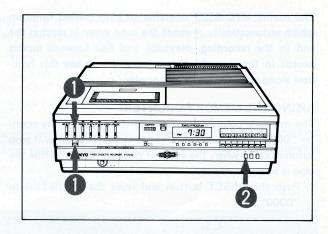

EDITING PROGRAMME MATERIALS

A. EDITING DURING RECORDING

- To edit out unwanted programme during recording push the PAUSE button. Observe that the PAUSE indicator flashes to indicate "pause".
 Please note that the PAUSE mode should not be kept more than 3 minutes in order to avoid unnecessary tape wearing.
- 2. To resume recording, push the PAUSE button again.

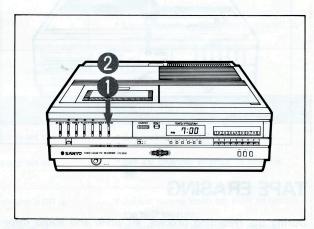


B. ADDING NEW MATERIALS TO A PRE-RE-CORDED CASSETTE

- Check to see that the tab covering the recording prevention hole has not been removed. If it has, cover the hole with adhesive tape.
- Operate the recorder in the playback mode as outlined in the section titled "PLAYBACK OF A PRE-RECORDED CASSETTE".
- At the precise point on the tape you wish to add the new material, push the PAUSE button then push the REC button.

Note: After PAUSE push only REC for new recording (LOCK not necessary).

- 4. To start recording, push the PAUSE button again.
- 5. To stop recording, push the STOP button.

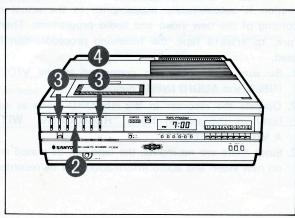


AUTOMATIC REWIND SYSTEM AND MEMORY COUNTER

The model VTC 5350 contains an auto rewind function which automatically rewinds the tape when it reaches the end in the recording, playback and fast forward modes except in timer mode. It is a good idea to use this function along with the memory counter.


(USING THE MEMORY COUNTER)

The memory counter can be used to memorize the counter "0000" tape position, and the video recorder will stop automatically when the counter reaches "0000" while the tape is being rewound.

 Push the RESET button and reset the COUNTER to "0000".

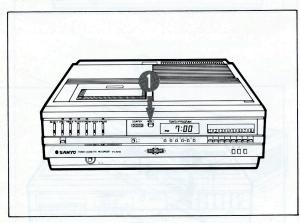

2. Push MEMORY button to the ON position.

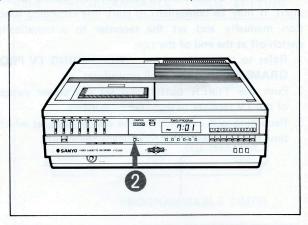


Notes:

- * The memory counter works only in the rewind mode.
- * The video recorder is set to stop mode when the counter indicates approximately "0000". To rewind the tape further, push the REW button again.
- * When the memory counter function is not employed, the tape is rewound to its start and the video recorder is set to stop mode.

TAPE ERASING

During the recording process, all video and audio information is automatically erased prior to the actual recording of the new video and audio programme. Therefore, to erase a tape, the following procedure can be used.

- 1. Be sure that nothing is connected to the VIDEO INPUT and AUDIO INPUT connectors.
- Operate the recorder in the RECORD mode as outlined in the section titled "RECORDING WITH A VIDEO CAMERA".
- Since there are no inputs, the tape will be erased and no new video and audio information will be recorded.

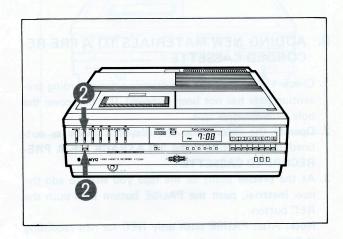

MAINTENANCE

The VTC 5350 is a precision instrument and, treated with care, will provide years of satisfactory performance. However, in the event of difficulties, the owner is advised not to attempt to make repairs or open the cabinet. Servicing should always be referred to your Sanyo Authorized Dealer.

TROUBLE SHOOTING

The Model VTC 5350 is a highly sophisticated instrument. It is shipped from the Sanyo factory after having been checked and adjusted under the most rigid quality control and inspection system. Should problems appear, check the following points.

INSERTING OR REMOVING THE CASSETTE

Symptom Cause		Check Point & Correction
Cassette Loading Door does not open by pushing EJECT button.	* POWER ON button is not pushed. * AC line power to the recorder has been interrupted.	* Push POWER ON button. * Check if AC power cord is plugged in.
Cassette cannot be inserted into recorder.	* Cassette is reversed.	* Load cassette in direction indicated by arrow on cassette.

RECORDING TV PROGRAMMES

Symptom	Cause	Check Point & Correction
No picture on TV screen.	* TUNER/EXT IN switch is set to "EXT IN" position. * TV channel selector is not set to channel 36.	* Set switch to "TUNER" position. * Set TV channel selector to channel 36.
A picture appears on TV screen but is not clear.	* The off air reception on the VCR is poor. * Reception on the TV receiver is poor.	* Adjust tuning knob on VCR to obtain the best picture. * Adjust tuning knob of TV receiver to obtain the best picture.
No recording even when LOCK button and REC button are pushed. (REC indicator flashes)	* Accidental erasure tab has been removed from cassette.	* Stick a piece of cellophane tape over prevention hole.
No recording even when LOCK button and REC button are pushed. (REC indicator does not light)	* Moisture condensation on head drum: DEW indicator on.	* Wait until DEW indicator goes out.

RECORDING WITH VIDEO CAMERA

Symptom Cause		Check Point & Correction
Camera picture does not appear on TV screen.	* TUNER/EXT IN switch is set to "TUNER" position. * TV channel selector is not set to channel 36.	* Set switch to "EXT IN" position. * Set TV channel selector to channel 36.
A picture appears on TV screen but is not clear.	* Reception on the TV receiver is poor. * Lens iris is not sufficiently open. * Not enough light.	* Adjust tuning knob of TV receiver to obtain the best picture. * Adjust iris. * Increase illumination.
No recording even when LOCK button and REC button are pushed. (REC indicator flashes)	* Accidental erasure tab has been removed from cassette.	* Stick a piece of cellophane tape over prevention hole.
No record mode even when LOCK button and REC button are pushed. (REC indicator does not light)	* Moisture condensation on head drum: DEW indicator on.	* Wait until DEW indicator goes out.

PLAYBACK OF PRE-RECORDED CASSETTE

Symptom	Cause	Check Point & Correction
No picture appears on TV receiver screen when PLAY button is pushed.	* TV channel selector is not set to channel 36.	* Set TV channel selector to channel 36.
No picture, but audio is clear.	* Dust and dirt on video heads.	* Take unit to Sanyo Authorized Dealer.
Noise interferes with playback picture.	* Reception on the TV receiver is poor. * Misadjustment of tracking control. * Dust and dirt on video heads.	* Adjust tuning knob of TV receiver to obtain the best picture. * Adjust tracking control. * Take unit to Sanyo Authorized Dealer.
No playback even when PLAY button is pushed. (PLAY indicator does not light.)	* Moisture condensation on head drum: DEW indicator on.	* Wait until DEW indicator goes out.

DIGITAL DISPLAY

Digital display is flashing.	* Interruption of AC power.	* Reset time according to instructions.
Sumptom	Cause	Check Point & Correction

BETA-FORMAT VIDEO CASSETTE RECORDER SPECIFICATIONS

Television system	CCIR B, G/PAL and SECAM Colour standards.
Recording system	Rotary two head helical scan system
Tape speed	18.73 mm/sec.
Recording time	3 hours 15 minutes with L-750 cassette
Tape loading	Automatic loading (U-type)
Video cassettes	L-250, L-500 and L-750
	Dimensions 96(W) x 25(H) x 156(D) mm
Tuner	8 channels varactor tuner
Tuner input	Channel 2 – 4, 5 – 12, 21 – 69
RF converter	Built-in UHF converter
Converter output	On channel $30 - 39$ (adjustable), Pre-adjusted to 36
Timer	Built-in digital timer, AM/PM 12 hour clock, one week-one programme timer
Tape counter	4 digits mechanical counter
Tape rewind memory	Available by push button
Fast forward time	6 min. with L-750 cassette
Rewind time	6 min. with L-750 cassette
Controls	
Tape transport	EJECT, REC, REW, PLAY, F FWD, STOP, PAUSE push button
Power switch	POWER ON, STAND BY, TIMER push button
Tracking	TRACKING mid position notch, VR
Timer	CLOCK SET push button
	REC START push button
	REC STOP
	REC DAY
	DAY/HOUR push button
	MIN
Counter	RESET
	MEMORY
Tuner selection	8 positions soft touch sensor
Channel adjustment VHF	1 2 - 4
VHF	III 5 – 12 Gloss Miles x (Miles x (Mile
UHF	U 21 – 69 lever switches and VRs
Input selection	TUNER/EXT IN slide switch
RF converter	CHANNEL ADJUSTMENT 30 — 39 VR
Power voltage selection	VOLTAGE SELECTOR H/L rotary sw
Terminals	switch is in off (STAND BY position) so far & AC cond is connected to AC line.
Antenna input	ANT IN
Antenna output	ANT OUT
Video input	ANT OUT
Video niput	VIDEO INPUT BNC
Audio input	VIDEO OUTPUT BNC
Audio iliput	AUDIO INPUT 3.5 mmφ RCA

Audio output

Indicators

POWER ON red LED
TIMER red LED
REC red LED
PAUSE red LED
REW red LED
PLAY red LED
F FWD red LED
Tuner selection red LED
DEW red LED
PAL red LED
SECAMred LED

Electrical characteristics

Video output level 1 ± 0.2 Vp-p Video output impedance 75 ± 5 ohms Audio output level -5dBsVideo input level 0.5 - 2 Vp-pVideo input impedance 75 ± 5 ohms Audio input level AUDIO IN -10 dBs AUDIO IN high Audio input impedance Video S/N More than 42 dB Audio S/N More than 40 dB Horizontal resolution Colour 270 lines B/W 300 lines Audio bandwidth 50 Hz - 10 kHz

Other characteristics

Wow and flutter Less than 0.3 % pp DIN Loading time Less than 4 sec. Unloading Less than 4 sec.

Power requirement AC 110 \sim 127, 220 \sim 240 V, 50/60 Hz, 40 W (8 W at STAND BY)

Dimensions 480(W) x 135(H) x 350(D) mm

Weight 10 kg.

Power switch of this set is connected in the secondary circuit and does not disconnect the set from AC-power even if the switch is in off (STAND BY position) so far as AC cord is connected to AC line.



	المبينات المبينات
	:It I:a-
أحمر LED	
أحمر LED	
الم الحر LED	
	الطمية
	بال
The plant of the second of the	ASC JULIOCK ID
	الخواص الكهربية
p-r	مستوى إخراج الڤيديو ± ۲ر • ڤولت (
	مقاومة إخراج الڤيديو
	مستوى إخراج الصوت – ٥ ديسبل
p-i	مستوى إدخال الڤيديو ٥ر٠ – ٢ ڤولت ٥
	مقاومة إدخال الڤيديو
	مستوى إدخال الصوت : -
	مقاومة إدخال الصوت : مرت
	الاشارة / التشويش للڤيديو أكثر من ٤٢ ديسبل
나를 마시하면서 하는 그리고 하는 것이 하는 이렇게 하는 그리고 있다면 사람들이 되었다면 그리고 있다. 그리고 있는 생각 생각이 되었다면서 이 기를 가지 않는데 그리고 있다면 없다면 하다.	الاشارة / التشويش للصوت أكثر من ٤٠ ديسبل
	التحليل الأفقى ملون : ٢٧٠ خط
	أبيض / أسود : ٠٠
م وتو	عرض نطاق التردد الصوتي ٥٠ هرتز ـ ١٠ ك ه
	الخواص الاخرى
pp DIN	- 5 0 25 5 - 5
	زمن تحميل الكاسيت أقل من ٤ ثواني
	إخراج الكاسيت أقل من ٤ ثواني
۱۲۷ / ۲۲۰ ـ ۲٤۰ ڤولت ، ٥٠ / ٦٠ هرتز ، ٤٠ وات (٨ وات عند وضع الاستعداد)	إستهلاك القدرة المتردد ١١٠ -
	الاستعداد)
۱۳ (إرتفاع) × ۳۰۰ (عمق) مم	الأبعاد × ٥

مفتاح القدرة لهذا الجهاز متصل بالدائرة الثانوية ولا يقوم بفصل الجهاز عن قدرة التيار المتردد حتى عندما يكون المفتاح في وضع الايقاف (وضع STAND BY) وذلك طالما كان سلك التيار المتردد متصلًا بمصدر للتيار المتردد .

۱۰ کجم



الوزن

مواصفات مسجل القيديو كاسيت بيتا _ فورمات

	نظام التلڤزيون
مواصفات CCIR القياسية لأنظمة B,G / پال وسيكام الملون	
نظام مسح لولبی ذو رأسان دواران	نظام التسجيل
۷۳ر۱۸ مم / ثانية	سرعة الشريط
٣ ساعات و ١٥ دقيقة مع الكاسيت 750- ا	زمن التسجيل
تحميل آلي (النوع ـ U)	تحميل الشريط
. L-750 , L-500 . L-250	كاسيتات الڤيديو
الأبعاد ٩٦ (عرض) × ٢٥ (إرتفاع) × ١٥٦ (عمق) مم	
موالف لمس خفيف ٨ قنوات	الموالف
القنوات ٢ ـ ٤ ، ٥ ـ ١٢ ، ٢١ ـ ٦٩	إدخال الموالف
محول UHF داخلي	RF محول
على القنوات ٣٠ ـ ٣٩ (قابل للضبط) ، ضبط مسبق على ٣٦.	إخراج المحول
مؤقت رقمي داخلي ، ١٢ ساعة AM/PM ، مؤقت لبرنامج خلال أسبوع	المؤقت
عداد میکانیکی ٤ أرقام	عداد الشريط
متواجدة بزرار ضاغط مستواجدة بزرار ضاغط	ذاكرة إرجاع الشريط
٦ دقائق مع الكاسيت L-750	زمن الحركة السريعة للأمام
٦ دقائق مع الكاسيت L-750.	زمن الارجاع
A PROPERTY OF THE PROPERTY OF	
Huseline (sered anythin)	مفاتيح التحكم
القذف ، التسجيل ، الارجاع ، المشاهدة ، الحركة السريعة للأمام ، الايقاف ، الايقاف المؤقت زرار ضاغط	حركة الشريط
تشغيل القدرة ، الاستعداد ، المؤقت	مفتاح القدرة
ت	التتابع
	المؤقت
에 가장 하셨다면 가게 되었다. 1000 1000 1000 1000 1000 1000 1000 10	
	العداد
إعادة الضبط	
الذاكرة	إختيار الموالف
جهاز إحساس لمس خفيف ، ٨ قنوات المحافق ا - ٢ - ٤	مبير سولت ضبط القناة VHF
17.0	VHF
	UHF
۷۲ - ۲۹	الحتيار القدرة الداخلة إختيار القدرة الداخلة
موالف / قدرة داخلة	بمتبار الفدارة الداخلة محول RF
ضبط القنوات ۳۰ ـ ۳۹ ـ	محول ۱۲۱۰ اختیار شدة التیار
مفتاح إختيار الڤولت H : تيار متردد ۲۲۰ ـ ۲۲۰ ڤولت دوار SW	الحيار سده اليار
L :تيار متردد ۱۱۰ ـ ۱۲۷ ڤولت	
	الأطراف
موصل إدخال الهوائي	إدخال الهوائي
	إخراج الهوائي
موصل اخراج الهوائي	. عرب هجوانی إدخال الڤيديو
موصل إدخال الشيديو	اخراج الڤيديو إخراج الڤيديو
موصل إخراج الڤيديو	، عربج الحيديو إدخال الصوت
موصل إدخال الصوت	اد عن الحسوب اخراج الصوت
موصل إخراج الصوت قطر ٥ر٣ مم RCA	إحراج السوت

التسجيل مع كاميرا ڤيديو

نقطة الفحص والاصلاح	البب	الأعراض
 ★ ضع المفتاح على الوضع "EXT IN" . ★ ضع مفتاح إختيار قناة التلڤزيون على الفناة ٣٦ . 	 ★ مفتاح TUNER/EXT IN مضبوطاً على الوضع "TUNER" . ★ مفتاح إختيار قناة التلڤزيون ليس مضبوطاً على القناة ٣٦ . 	صورة الكاميرا لا تظهر على شاشة التلفريون .
 ★ أضبط مفتاح الضبط بجهاز التلڤزيون للحصول على أفضل صورة . ★ أضبط فتحة العدسة . ★ قم بزيادة الإضاءة . 	 ★ إستقبال جهاز التلفزيون ضعيف . ★ فتحة العدسة غير مفتوحة بشكل كاف . ★ الضوء غير كاف . 	تظهر الصورة على شاشة التلفزيون ولكن بدون وضوح .
★ ضع قطعة من الشريط اللاصق على فتحة منع التسجيل .	 ★ طرف المسح العضوى للتسجيل مزال من الكاسيت . 	لا يمكن التسجيل بالرغم من ضغط ذرار، LOCK وذرار REC . (يومض مبين REC)
★ إنتظر حتى ينطفى، مبين DEW .	 ★ تكاثف الرطوبة على رأس الاسطوانة : يضى، مؤشر DEW . 	لا يمكن التسجيل بالرغم من ضغط زدار LOCK وزرار REC . (لا يومض مبين REC)

مشاهدة كاسيت سبق تسجيله

نقطة الفحص والاصلاح		الأعراض
 ★ أضبط مفتاح إختيار قناة التلڤزيون على القناة ٣٦ . 	 ★ مفتاح إختيار قناة التلفزيون ليس مضبوطاً على القناة ٣٦ . 	لا تظهر صورة على شاشة التلڤزيون عند الضغط على زرار PLAY .
 ★ أضبط مفتاح الضبط بحهاز التلفزيون للحصول على أفضل صورة . 	★ إستقبال جهاز التلڤريون ضعيف .	لا يوجد صورة ، ولكن الصوت واضح .
 ★ أضبط مفتاح الضبط بجهاز التلڤزيون الخصول على أفضل صورة . ★ أضبط مفتاح ضبط التتابع . ★ خذ الجباز إلى وكيل سانيو المعتمد . 	 ★ استقبال جهاز التلفزيون ضعيف . ★ عدم صحة ضبط مفتاحضبط التتابع . ★ وجود غبار أو قذارة على رؤوس الڤيديو . 	يتداخل التشويه مع الصورة المعروضة .
★ أنتظر حتى ينطفىء مبين DEW .	★ تكاثف الرطوبة على رأس الاسطوانة : يضىء مبين DEW .	لا يمكن المشاهدة حتى عند الضغط على زرار PLAY . (لا يضىء مبين PLAY)

القراءة الرقمية

نقطة الفحص والاصلاح	البيب	الأعواض
★ أعد ضبط الوقت طبقاً للتعليمات .	★ إنقطاع لقدرة التيار .	تومض القراءة الرقمية .

الصيانة

لن الجهاز VTC 5350 كناية ، ومع إستعماله بعناية ، فانه سوف يقدم لك سنوات من الأداء الممتاز . ومع ذلك ، وفي حالة حدوث أى مشاكل ، فاننا ننصح مالك الجهاز بألا يحاول عمل إصلاحات أو فتح الكابينة . أعمال الخدمة يجب الرجوع فيها دائماً إلى وكيلك المعتمد لسانيو .

فحص أماكن الخلل

إن الموديل VTC 5350 هو جهاز متطور للغاية . لقد تم شحنه من مصنع سانيو وذلك بعد أن تم فحصه وضبطه تحت أقصى النظم للتحكم في الجودة والفحص . إذا ظهرت هناك أي مشاكل فنية ، إختبر النقاط التالية .

إدخال أو اخراج الكاسيت

نقطة الفحص والاصلاح	البب	الأعراض
 ★ إضغط على زرار POWER ON . ★ إختبر ما إذا كان سلك توصيل التيار المتردد متصلاً بمصدر التيار . 	 ★ عدم الصنط على زرار POWER . ★ حدوث عطل أو إنفصال لسلك توصيل التيار المتردد . 	لا يفتح غطاء تحميل الكاسيت بالضغط على زرار EJECT .
 ★ قم بتحميل الكاسيت في الاتجاه الموضح بالسهم على الكاسيت . 	الكاسيت مقلوب .	عدم إمكانية إدخال الكاسيت في المسجل .

تسجيل برامج التلفزيون

نقطة الفحص والاصلاح	الب	الأعراض
★ ضع المفتاح على الوضع "TUNER" ·	★ مفتاح TUNER/EXT IN مضبوطاً على الوضع "EXT IN" .	لا يوجد صورة على شاشة التلڤزيون .
 ★ ضع مفتاح إختيار قناة التلڤزيون على القناة ٣٦ . 	الوضع ١٦٠ ١٨٠ . ★ مفتاح إختيار قناة التلفزيون ليس مضبوطاً على القناة ٣٦ .	
 ★ أضبط مفتاح الضبط بمسجل الڤيديو للحصول على أفضل صورة . 	★ إستقبال مسجل الڤيديو من الهواء ضعيف .	تظهر الصورة على شاشة التلفزيون
 ★ أضبط مفتاح الضبط بجهاز التلڤزيون للحصول على أفضل صورة . 	★ إستقبال جهاز التلڤريون ضعيف .	ولکن بدون وضوح . /
 ★ ضع قطعة من الشريط اللاصق على فتحة منع التسجيل . 	 ★ طرف المسح العضوى للتسجيل مزال من الكاسيت . 	لا يمكن التسجيل بالرغم من ضغط زرار LOCK وزرار REC . (يومض مبين REC)
★ إنتظر حتى ينطفى، مبين DEW .	★ تكاثف الرطوبة على رأس الاسطوانة :	لا يمكن التسجيل بالرغم من ضغط
Specifically for the first	يضى، مؤشر DEW ·	زرار LOCK وزرار REC . (لا يومض مبين REC)


نظام إرجاع آلى وعداد بذاكرة

يحتوى الطراز 5350 VTC على خاصية الارجاع الآلى والتى تقوم آلياً بارجاع الشريط وذلك عندما يصل إلى نهايت في أوضاع التسجيل ، المشاهدة والحركة السريعة للأمام فيما عدا عند إستعمال المؤقت ، إنها لفكرة جيدة أن تستخدم هذه الخاصية مع العداد ذو الذاكرة .

(إستخدام العداد ذو الذاكرة)

يمكن إستخدام العداد ذو الذاكرة من أجل تخزين الوضع "0000" للشريط ، وسوف يتوقف مسجل الڤيديو آلياً عندما يصل العداد إلى الوضع "0000" وذلك أثناء إرجاع الشريط .

١ - إضغط على زرار إعادة الضبط RESET وقــم باعــادة ضبــط العــداد
 COUNTER على الوضع "0000".

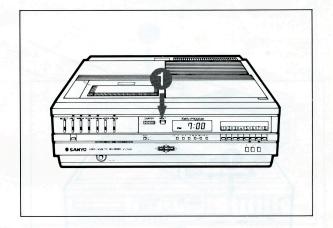

مسح الشريط


خلال إجراء عملية التسجيل ، فان كل التسجيل المرثى والصوتى المتواجد على الشريط يتم مسحه آلياً وذلك قبل التسجيل الحقيقى للبرنامج المرثى والصوتى الجديد . ولذلك ، ومن أجل مسح شريط ، فانه يمكن إتباع الخطوات التالية .

١ ـ تأكد أنه ليس هناك شئ متصل بموصلات إدخال الڤيديو VIDEO INPUT
 وإدخال الصوت AUDIO INPUT

٢ - قم بتشغيل المسجل على وضع التسجيل كما سبق شرح ذلك في القسم ذو العنوان
 «التسجيل مع كاميرا ڤيديو».


٣ - حيث أنه لا يوجد أى قدرات داخلة ، فانه سيتم مسح الشريط ولن يحدث أى
 تسجيل مرئى وصوتى جديد .

٢ ـ إضغط على زرار الذاكرة MEMORY إلى وضع التشغيل ON .

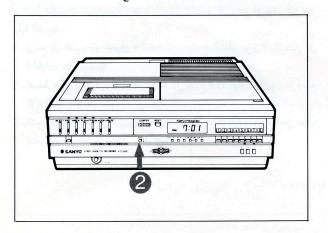

ملحوظات :


- ★ يعمل العداد ذو الذاكرة عند وضع الارجاع فقط .
- ★ يضبط مسجل الڤيديو على وضع الايقاف عندما يوضح العداد "0000" بالتقريب . من أجل إرجاع الشريط أكثر من ذلك ، إضغط على زرار الارجاع REW مرة ثانية .
- ★ عند عدم إستخدام خاصية العداد ذو الذاكرة ، سيعود الشريط إلى بدايتـــه وسيأخذ مسجل الثيديو وضع الايقاف .

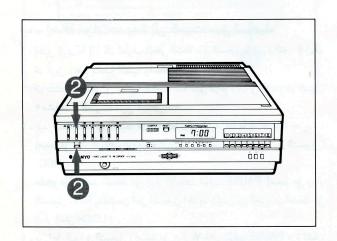

الاتهاء الآلي للتسجيل

تحت بعض الحالات الخاصة ، مثل عند الذهاب إلى النوم ليلًا ، فانه قد يكون من الملائم أن تبدأ عملية التسجيل يدوياً وتضبط المسجل للتحويل إلى وضع الايقاف آلياً عند نهاية الشريط .

- ١ إرجع إلى القسم ذو العنوان «تسجيل برامج التلڤزيون» وإتبع كل الخطوات.
- لا يضغط على زرار المؤقت TIMER وضع على مفتاح قدرة جهاز التلفزيون على وضع الايقاف "OFF".
- ٣ ـ التسجيل سوف يستمر حتى نهاية الشريط ، وعند ذلك الوقت فان المسجل سوف
 يتحول آلياً إلى وضع الايقاف .

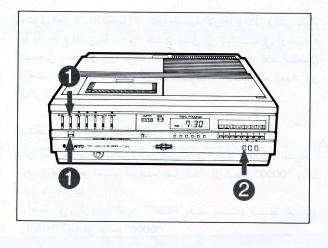


تحرير مواد البرنامج

أ_التحرير خلال التسجيل

١ ـ من أجل حذف برنامج غير مطلوب خلال التسجيل ، إضغط على زرار الايقاف
 ١٨ؤقت PAUSE . لاحظ أن مبين الايقاف المؤقت PAUSE سيومض لكى يوضح
 "pause"


برجاء مراعاة أن وضع الايقاف المؤقت PAUSE يجب أن لا يستمر لأكثر من ثلاث دقائق وذلك من أجل تلافي الاستهلاك الغير ضروري للشريط .

٢ ـ من أجل إستئناف التسجيل ، إضغط على زرار الايقاف المؤقت PAUSE مرة
 ثا: ة

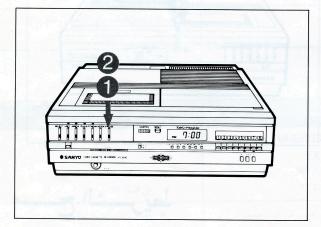


ب_ إضافة مواد جديدة إلى كاسيت سبق تسجيله

- ١ ـ إختبر لترى ما إذا كان الطرف المغطى لفتحة منع التسجيل لم يتم إزالته . إذا كان قد أزيل ، فقم بتغطية الثقب بواسطة شريط لاصق .
- ٢ قم بتشغيل المسجل في وضع المشاهدة كما سبق شرح ذلك في القسم ذو العنوان
 «مشاهدة كاسيت سبق تسجيله» .
- عند النقطة المحددة بالضبط على الشريط والتي تريد عندها إضافة مادة جديدة ،
 إضغط على زرار الايقاف المؤقت PAUSE ثم إضغط بعد ذلك على زرار التسجيل .
 REC .
- ملحوظة: بعد الضغط على زرار الايقاف المؤقت PAUSE إضغط على زرار التسجيل REC وذلك من أجل التسجيل الجديد (ليس من الضرورى الضغط على زرار الغلق LOCK).
- ٤ ـ من أجل البدء في التسجيل ، إضغط على زرار الايقاف المؤقت PAUSE مرة ثانية .
 - ه ـ من أجل إيقاف التسجيل ، إضغط على زرار الايقاف STOP .

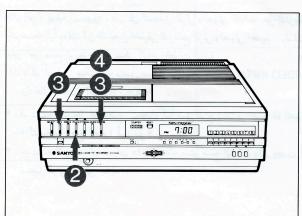


ج _ تحميل كاسيت الپيديو

- ٤ ـ إضغط على زرار القذف EJECT .
- ه ـ أدخل كاسيت الڤيديو في غطاء تحميل الكاسيت ثم إغلق الغطاء . سيتم تحميل الشريط آلياً .

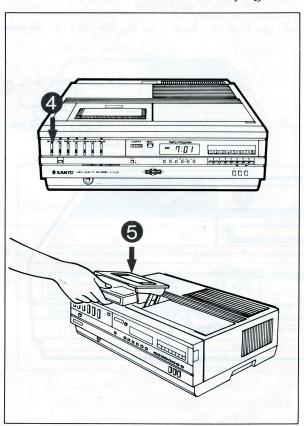


د _ ضبط القناة

٦ ـ إضغط على زرار إختيار القناة المطلوبة .

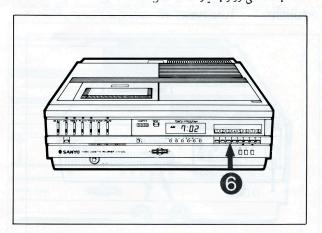


ه_ ضبط المؤقت ذو البرنامج

اضبط المؤقت ذو البرنامج ، إرجع إلى القسم ذو العنوان «ضبط المؤقت ذو البرنامج» .

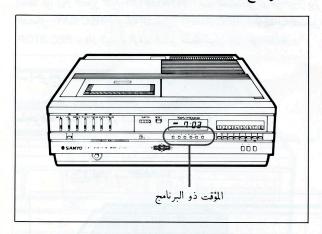

و_الاعداد للتسجيل

1. إضغط على زرار المؤقت TIMER . لاحظ أن مبين المؤقت TIMER سوف يضيء وأن مبين تشغيل التيار POWER ON سوف ينطفي، . سيتحول المسجل إلى وضع التشغيل آلياً وسيبدأ التسجيل عندما يصل توقيت الساعة إلى وقت بداية التسجيل السابق ضبطه . وسوف يستمر التسجيل حتى الوقت السابق ضبطه لايقاف التسجيل ، وعند هذا الوقت فان المسجل سوف يتحرك آلياً إلى وضع الايقاف .

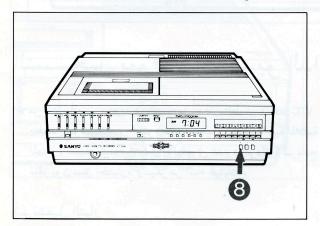

إخراج وتأكيد البرنامج

إضغط على زرار تشغيل التيار POWER ON . عند الضغط على أى من أزرار يوم التسجيل REC DAY ، أو بدء التسجيل REC START ، أو إيقاف التسجيل REC STOP ، فان اليوم أو الوقت السابق ضبطه سوف يظهر على الشاشة .


أ_إخراج وتأكيد يوم التسجيل

إضغط على زرار يوم التسجيل REC DAY .

ملحوظة : ستقل قراة يوم التسجيل بمقدار ١ في كل يوم .

فعلى سبيل المثال ، ستوضح الشاشة اليوم "d:3" . وسوف تتغير غداً إلى "d:2" وهكذا .

("d:1" و "d:E" لا يتغيران .)

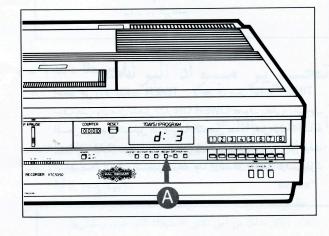

ب _ إخراج وتأكيد وقت البداية للتسجيل الآلي


إضغط على زرار بدء التسجيل REC START .

مُلحوظة : إذا لم يكن هناك وقت للبداية مضبوطاً ، فان القراءة سوف تكون « _ _ : _ _ » .

ج - إخراج وتأكيد وقت النهاية للتسجيل الآلي .

إضغط على زرار إيقاف التسجيل REC STOP .

ملحوظة : إذا لم يكن هناك وقت للنهاية مضبوطاً ، فان القراءة ســوف تكــون

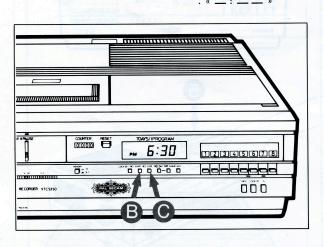


التسجيل بمؤقت القيديو الداخلي

★ من أجل أقصى مرونة في التسجيل ، فان الطراز 5350 VTC يختص بمؤقت داخلى إلكتروني للتسجيل . هذه الخاصية الملائمة الممتازة تسمح بتسجيل كامل الآلية ، في عدم وجودك ، لبرنامج تلفزيون سبق إختياره وسيعرض أثناء غيابك .


أ _ تشغيل التيار

- ۱ إضغط على زرار تشغيل التيار POWER ON .
- ٢ لاحظ أن مبين تشغيل التيار POWER ON سوف يضيء .

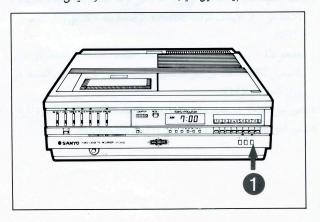


ب _ إختبار المفتاح

"TUNER" . . TUNER/EXT IN قدرة داخلة - "

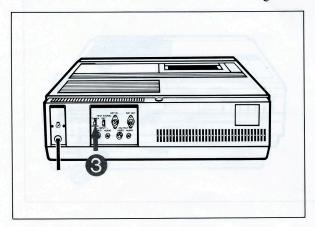

ضبط المؤقت ذو البرناميج

١ - إضغط على زرار تشغيل التيار POWER ON .
 لاحظ أن مبين تشغيل التيار POWER ON سوف يضىء .

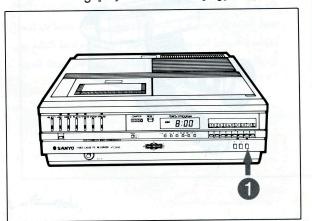

٢ ـ أثناء حفظ زرار يوم التسجيل REC DAY مضغوطاً ، إضغط على زرار اليوم /
 الساعة DAY/HOUR وذلك من أجل ضبط يوم التسجيل الآلى .

توضح الشاشة يوم التسجيل كما يلي :

d:1 = اليوم وحتى منتصف الليل

d:2 = غــدآ

d:3 = بعد غد

d:4 = اليوم الرابع من اليوم


d:5 = اليوم الخامس من اليوم

d:6 اليوم السادس من اليوم


d:7 = اليوم السابع من اليوم

d:E کل یوم


إذا قمت بالضبط إلى d:E (كل يوم) ، فان البرامج المذاعة في نفس الوقت كل يوم (وعلى نفس القناة) سوف تسجل وذلك حتى يتم إستعمال الشريط تماماً .

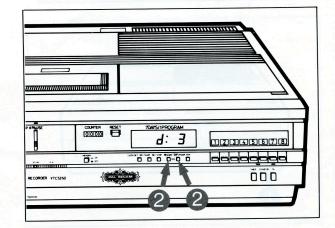

" - أثناء حفظ زرار بدء التسجيل REC START مضغوطاً ، إضغط على زرار اليوم / الساعة DAY/HOUR أو زرار الدقائق MIN وذلك من أجل ضبط وقت البداية للتسجيل الآلى .

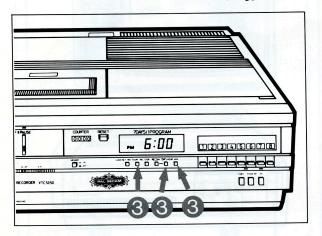


٤ - أثناء حفظ زرار إيقاف التسجيل REC STOP مضغوطاً ، إضغط على زرار اليوم / الساعة DAY/HOUR أو زرار الدقائق MIN وذلك من أجل ضبط وقت النهاية للتسجيل الآلى .

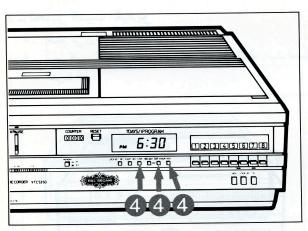

ه_المراقبة


١٠ _أضبط الكاميرا من أجل الحصول على أفضل صورة .

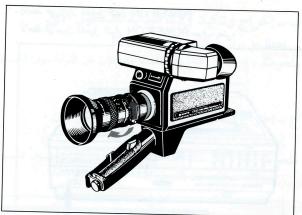


و_التسجيل

۱۱ ـ إضغط على زرار القفل LOCK وعلى زرار التسجيل REC وذلك من أجل البدء في التسجيل .


١٢ ـ إضغط على زرار الايقاف STOP من أجل إنهاء التسجيل .

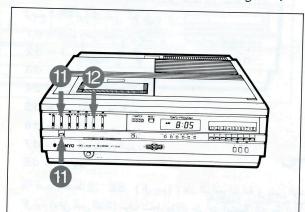

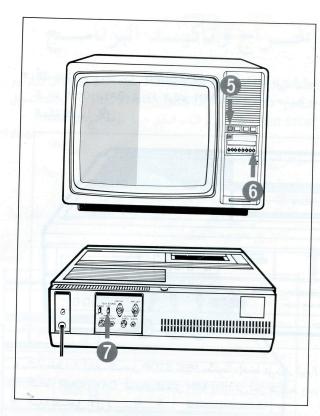

د _ تحميل كاسيت الڤيديو

- ٨ إضغط على زرار القذف EJECT .
- ٩ . أدخل كاسيت ڤيديو في غطاء تحميل الكاسيت ثم أغلق الغطاء . سيتم تحميل الشريط آلياً .

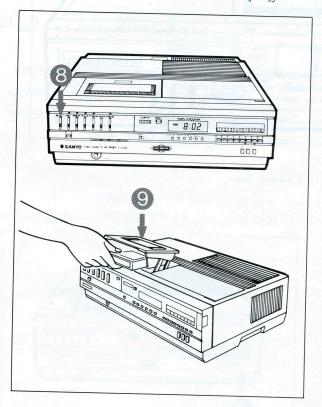

و _ ضبط التتابع

1. يكون عادة ضبط تتابع رأس الڤيديو مطلوباً فقط عند مشاهدة كاسيتات ڤيديو تم تسجيلها على مسجل آخر . ويتضح عدم التتابع عندما تظهر مجموعة ضيقة من التشويه الأفقى في الصورة كما هو موضح بالشكل . في هذه الحالة فانه يمكن الحصول على صورة ممتازة خالية من التشويه وذلك بادارة مفتاح ضبط التتابع إلى اليمين أو إلى اليسار كما يتطلب ذلك . عندما يتم تسجيل ومشاهدة كاسيتات الڤيديو على نفس الجهاز ، فان مفتاح ضبط التتابع يجب أن يظل في وضع المنتصف (العلامة) وذلك من أجل أقصى جودة للصورة .




التسجيل مع كاميرا ڤيديو

★ من أجل أفضل النتائج ، فانه يوصى باستخدام كلميرا ذات نسبة تشابك داخلى
 ١ ٢ من أجل تسجيل الڤيديو . على سبيل المثال كلميرا سانيو VCC 545P ،
 ٧ ٢ 1400 .


أ _ تشغيل مفتاح القدرة

- ۱ إضغط على زرار تشغيل التيار POWER ON
- ٢ ـ لاحظ أن مبين تشغيل التيار POWER ON سوف يضي. .

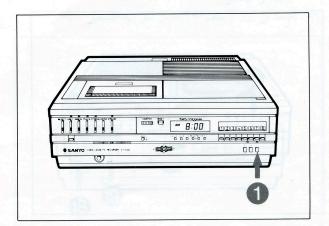

ب_ إختبار المفاتيح

- "EXT IN" . . . TUNER/EXT IN قدرة داخلة "
- ٤ مفتاح إختبار الاشارة TEST SIGNAL ٤

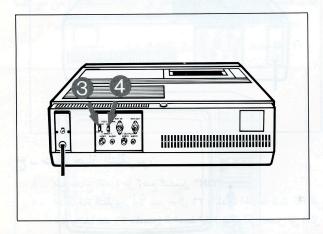


ج ـ ضبط جهاز التلڤزيون

- ٥ ضع مفتاح القدرة على وضع التشغيل "ON".
- آضبط قناة التلفريون أولاً عند حوالي ٣٦ (القدرة الحارجة لقناة RF قد سبق ضبطها عند ٣٦ بالمصنع) ثم أضبط القناة بعناية لكى تحصل على شكل إختبار الاشارة على شاشة التلفريون .
- ٧ ضع مفتاح إختبار الاشارة TEST SIGNAL على وضع الايقاف
 "OFF"


مشاهدة كاسيت سبق تسجيله

أ_تشغيل التيار

- ۱ ـ إضغط على زرار تشغيل التيار POWER ON .
- ٢ ـ لاحظ أن مبين تشغيل التيار POWER ON سوف يضيء .

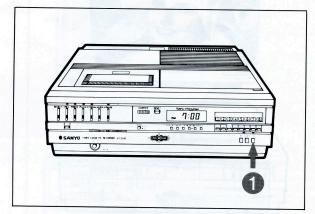


ب_ إختبار المفتاح

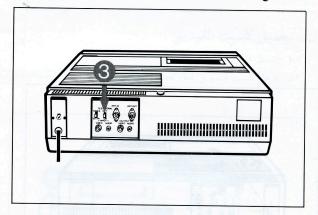


ج _ ضبط جهاز التلفزيون

- ٤ ـ ضع مفتاح القدرة على وضع التشغيل "ON".
- ه ـ أضبط قناة التلفزيون أولاً عند حوالى ٣٦ (القدرة الخارجة لقناة RF قد سبق ضبطها عند ٣٦ بالمصنع) ثم أضبط القناة بعناية لكى تحصل على شكل إختبار الاشارة على شاشة التلفزيون .
- ٦ ضع مفتاح إختبار الاشارة TEST SIGNAL على وضع الايقاف
 "OFF"

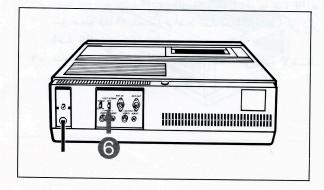


د _ تحميل كاسيت الڤيديو


- ۷ ـ إضغط على زرار القذف EJECT .
- ٨ ـ أدخل كاسيت سبق تسجيله في غطاء تحميل الكاسيت ثم أغلق الغطاء . سيتم
 تحميل الشريط آلياً .

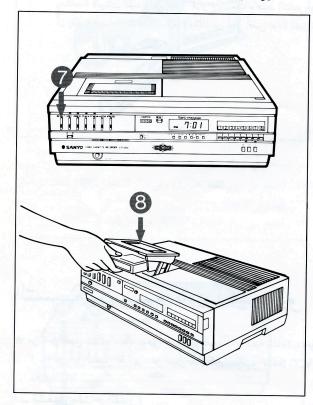

ه_المشاهدة


٩ ـ إضغط على زرار المشاهدة PLAY .

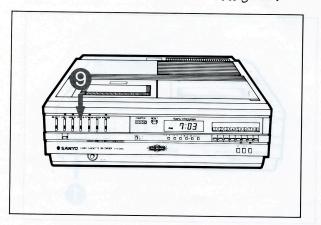

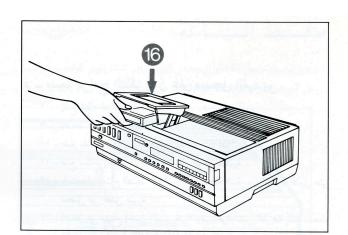


و _ مراقبة البرنامج

١٧ ـ باستخدام الموالف الداخلي للمسجل ، أضبط قناة التلڤزيون المطلوب تسجيلها .

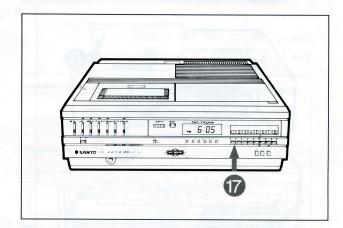

ز _ التسجيل

- ۱۸ ـ إضغط على زرار القفل LOCK وعلى زرار التسجيل REC وذلك من أجل أن تبدأ في التسجيل .
 - 19 ـ إضغط على زرار الايقاف STOP من أجل إنهاء التسجيل .

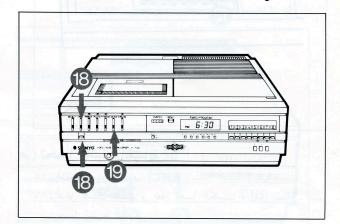


ح _ تحرير البرنامج

 ٢٠ من أجل حذف برنامج غير مطلوب خلال التسجيل ، إضغط على زرار الايقاف المؤقت PAUSE . لاحظ أن مبين الايقاف المؤقت PAUSE سيومص لكى يوضح "pause" .


برجاء مراعاة أن وضع الايقاف المؤقت PAUSE يجب أن لا يستمر لأكثر من ثلاث دقائق وذلك من أجل تلافى الاستهلاك الغير ضرورى للشريط . إضغط على زرار الايقاف المؤقت PAUSE مرة ثانية من أجل إستئناف التسجيل .

ملحوظة : سوف يتوقف مسجل الثيديو آلياً إذا إستمر وضع الايقاف المؤقت PAUSE فقرة ٥ دقائق تقريباً . ذلك من أجل حماية الشريط من التلف .

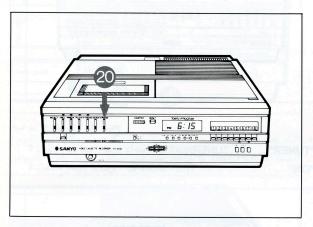

ط_مشاهدة قناة تلفزيون أخرى أثناء التسجيل من موالف مسجل الفيديو


٢١ ـ قم بضبط جهاز التلڤزيون إلى القناة المرغوبة .

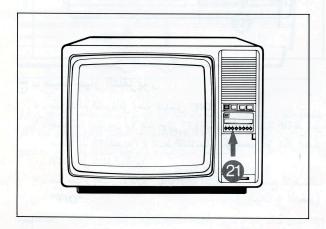


حيل برامج التلفزيون

ـ تشغيل التيار

- ۱ إضغط على زرار تشغيل التيار POWER ON .
 - ٢ ـ لاحظ أن مبين تشغيل التيار سوف يضيء .

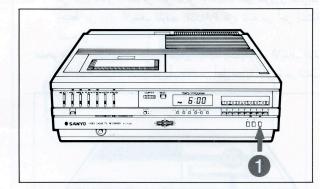


- أوضاع المفاتيح

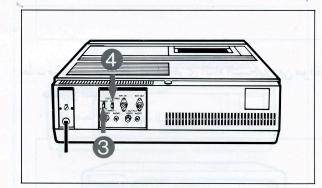


ر ـ ضبط جهاز التلڤزيون

- ٥ ضع مفتاح القدرة على وضع التشغيل "ON" .
- ٦- أضبط قناة التلفزيون أولاً عند حوالى ٣٦ (القدرة الخارجة لقناة RF قد سبق ضبطها عند ٣٦ بالمصنع) ثم أضبط القناة بعناية لكى تحصل على شكل إختبار الاشارة على شاشة التلفزيون .
- ٧ ضع مفتاح إختبار الاشارة TEST SIGNAL على وضع الايقاف
 "OFF"

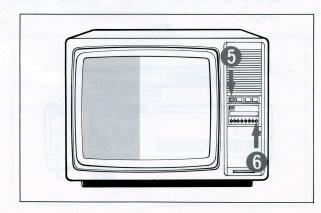

د _ ضبط برامج التلڤزيون على مسجل الڤيديو

- ٨ إفتح غطاء خزانة الموالف .
- ٩ ـ إضغط على مفتاح إختيار القناة رقم ١ .
- ١٠ ـ ضع مفتاح AFT على وضع الايقاف "OFF" .
- ١١ ـ ضع مفتاح إختيار الموجة "1" على الموجة المطلوبة .
- ١٢ ـ باستخدام مفتاح الضبط "1" ، أضبط محطة التلڤزيون المطلوبة الأولى حتى تحصل على أفضل صورة .
- ١٣ ـ إضغط على مفتاح إختيار القناة رقم ٢ وقم باجراء نفس الطريقة كما للمحطة
 الأولى . قم باعادة ذلك حتى يتم تخزين كل المحطات .
- ١٤ ضع مفتاح AFT على وضع التشغيل "ON" مرة ثانية من أجل التحكم الآلي في التردد .

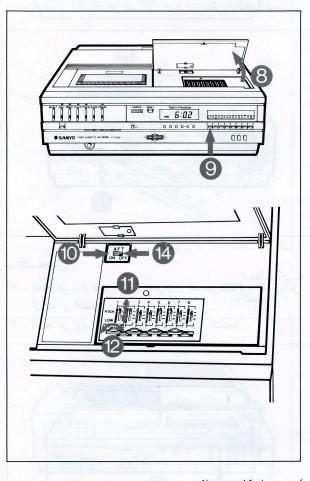


ه) تحميل كاسيت الڤيديو


- ١٥ ـ إضغط على زرار القذف EJECT .
- 17 ـ أدخل كاسيت الثيديو في غطاء تحميل الكاسيت ثم إغلق الغطاء . سيتم تحميل الشريط آلياً .

ضيط الساعة


١ عند توصيل مسجل الڤيديو إلى مصدر التيار ، فان شاشة إظهار الوقت سوف تبدأ
 في الوميض بالرقم "AM 12:00" .

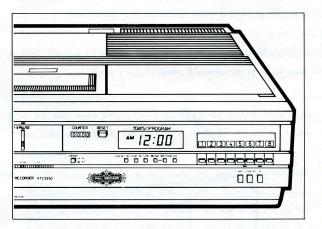


٢ ـ إضغط على زرار تشغيل التيار POWER ON
 لاحظ أن مبين تشغيل التيار سوف يضى،

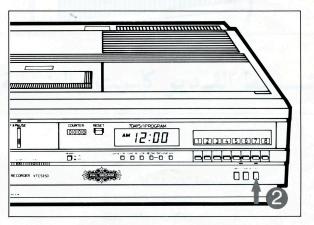


تأثناء المحافظة على زرار ضبط الساعة CLOCK SET مضغوطاً ، إضغط على زرار
 الدقائق MIN حتى يصل مبين الدقائق إلى حوالى "XX:50" .

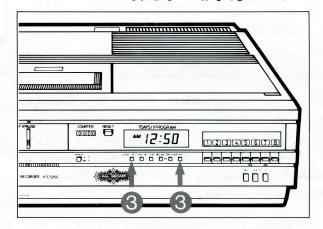

أثناء الضغط على زرار ضبط الساعة CLOCK SET ، إضغط على زرار الدقائق MIN مرة بعد مرة وذلك حتى يصل مبين الدقائق إلى "XX:00" ، ستبدأ الساعة في العد من "0" ثانية .

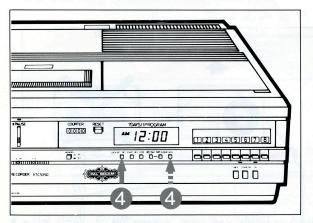

٥ . أثناء الضغط على زرار ضبط الساعة CLOCK SET ، إضغط على زرار اليوم / الساعة DAY/HOUR وذلك حتى يصل مبين الساعات إلى رقم الساعة المضبوط .

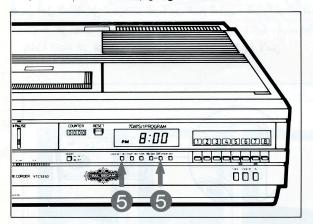


ملحوظة: يتغير مبين الساعة والدقيقة آلياً عندما يتم الضغط على أى من زرارى اليوم / الساعة DAY/HOUR أو الدقائق MIN وذلك لمدة أكثر من ثانيتين . سيتغير مبين الساعة والدقيقة بمقدار رقم واحد وذلك فى كل مرة يتم الضغط فيها على هذه الأزرار .


(إنقطاع التيار)

إذا حدث هناك إنقطاع للتيار ، فان شاشة الوقت سوف تتوقف عن الاظهار . وعندما يعود التيار مرة ثانية فان الشاشة سوف تومض بالرقم "AM 12:00" . قم بضبط الساعة طبقاً للطريقة الموضحة في «ضبط الساعة» .

★ لكى تبدأ فى تشغيل مسجلك بيتاكورد ، فان الكاسيت يجب أن يوضع بشكل صحيح فى غطاء تحميل الكاسيت بالمسجل . أدخل الكاسيت ، وناحية البطاقة لأعلى ، فى غطاء تحميل الكاسيت وذلك فى الاتجاه الموضح بالسهم . تأكد من أن الكاسيت مثبت فى أقصى داخل غطاء تحميل الكاسيت ، ثم إغلق بعد ذلك الغطاء بالضغط عليه لأسفل باحكام .

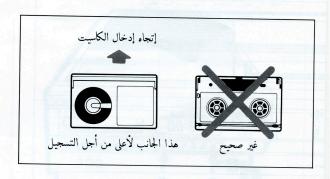

- ★ من أجل راحتك ، فإن هناك مجموعة من بطاقات الفهرس متواجدة مع كاسيت
 بيتاكورد . طريقة إستبدال البطاقة موضحة على كارت البطاقة .
- ★ من أجل المحافظة على تسجيلاتك القيمة من المسح العفوى ، فقم بكسر الطرف
 المتواجد على الجانب الخلفى للكاسيت . ومن أجل التسجيل مرة ثانية ، قم ببساطة
 بتغطية الفتحة التى قد كسرت الطرف منها وذلك بواسطة شريط لاصق .

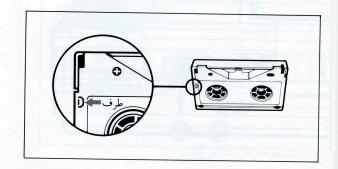

- العناية بكاسيت بيتاكورد
- ★ لا تستخدم أو تضع كاسيت بيتاكورد في مكان حار أو رطب . إهتم على وجه الخصوص بألا تعرضه لأشعة الشمس المباشرة ، معدات التدفئة أو الآلات الكهربائية التي ينتج عنها مجال مغناطيسي قوى . إذا تعرض الكاسيت إلى درجات حرارة باردة ، فانه يجب حفظه في درجة حرارة الغرفة لمدة ساعة واحدة على الأقل وذلك قبل إستخدامه .
- ★ إنه من الضرورى أن يظل غطاء حماية الشريط مغلقاً في جميع الأوقات وأن لا تقوم بلمس شريط الڤيديو ، حيث أن بصمات الأصبع قد تؤثر على تشغيل مسجل الڤيديو كاسيت .
- ★ من أجل أقصى حماية لكلسيت الڤيديو بيتاكورد ضد الغبار أو الضرر بدون
 قصد ، فانه يوصى بأن يظل الكلسيت دائماً في حافظة واقية وذلك عند عدم
 استخدامه .
- ★ إن كاسيت الڤيديو بيتاكورد هو جهاز حساس . لا تحاول أن تقوم بفك الغطاء البلاستيك . ذلك قد ينتج عنه قصور للكاسيت والضرر لمسجل الڤيديو كاسيت . وفي حالة عجز الكاسيت عن العمل بصورة طبيعية ، فان إصلاحه يجب أن يتم فقط بواسطة مسئول الصيانه المعتمد من قبل سانيو .


محول ترددات اللاسكى RF

هذا المحول RF CONVERTER متواجد مع مسجل الڤيديو كاسيت 5350 . ويقوم هذا المحول RF بتغيير إشارات القدرة الخارجة من المسجل للڤيديو والصوت إلى ترددات لاسلكي (RF) . إضافية معدلة من أجل مشاهدتها على أي جهاز إستقبال تلفزيون قياسي .

إستقبال القناة RF من الممكن إجرائه على قناة بين ٣٠ إلى ٣٩ . ويجب أن تتطابق القناة مع قناة إذاعية غير مستخدمة في منطقتك .

ملحوظة : إخلع الغطاء المطاطى المتواجد فوق مسمار الضبط الخاص بضبط القناة . القناة RF مضبوطة بالمصنع على القناة ٣٦ . عند إدارة مسمار ضبط القناة CHANNEL ADJUSTMENT في إتجاه عقارب الساعة ، فان رقم القناة RF سيصبح أقل .

ضع الغطاء المطاطى عندما يتم الانتهاء من ضبط القناة RF.

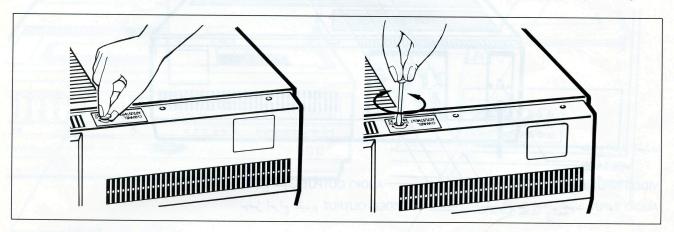

شريط القيديو كاسيت والعناية به

زمن التسجيل والمشاهدة L-250 : ٥٥ دقيقة

۱۳۰ : L-500 دقيقة ۱۹٥ : L-750 دقيقة

الأبعـاد : ٩٦ (عرض) × ٢٥ (إرتفاع) × ١٥٦ (عمق) مم




إن شريط القيديو كاسيت سانيو بيتاكورد BETACORD هو كاسيت ببكرتين ذو تصميم هندسي دقيق ويحتوي على شريط تسجيل ڤيديو عالى الأداء . وهو مصمم من أجل الاستخدام مع جهاز عرض / مسجل الڤيديو كاسيت سانيو بيتاكورد ، فشرائط الكليت بيتاكورد يقدم كل ملاءمة التحميل الآلي للشريط والمحافظة على محتويات التسجيلات القيمة . ومع عناية مناسبة ، فانه يمكنك الاستمتاع لساعات عديدة ببرامج ڤيديو عالية الجودة .

كيفية إستخدام كاسيت بيتاكورد

★ مثل شريط الكاسيت الصوتى ، فانه يمكن إعادة التسجيل على كاسيت بيتاكورد لعدة مرات . ومع ذلك ، وبعكس الكاسيت الصوتى ، فان الكاسيت بيتاكورد يمكن أن يسجل عليه في إتجاه واحد فقط ، حيث أن العرض بالكامل لشريط الڤيديو يستخدم من أجل تسجيل الصورة والصوت .

تعريف وتشغيل مفاتيح التحكم (ه)

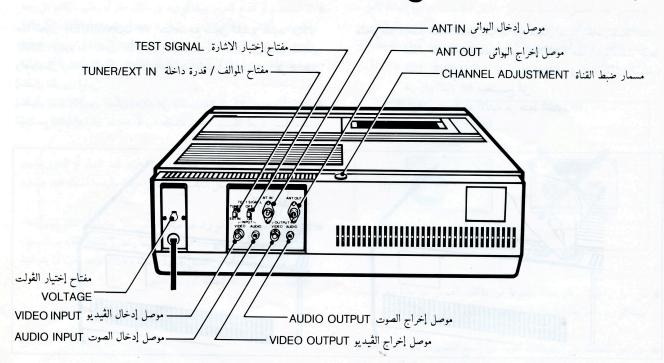

مفتاح إختيار القولت VOLTAGE

يستخدم مفتاح الاختيار هذا من أجل ضبط الڤولت الملائم لكى ينطبق مع ڤولت مصدر التيـار المتردد المتواجد . ضع مفتـاح الاختيار هذا على أى من الوضـع "H" أو الوضع "L" وذلك باستخدام مفك ذو طرف مسـتوى .

"H" : يستخدم هذا الوضع إذا كان مسجل الڤيديو كاسيت ســوف يعمل عـلى مصدر للتيار المتردد شــدته ٢٢٠ ـ ٢٤٠ ڤولت .

"L" : يستخدم هذا الوضع إذا كان مسجل الثيديو كاسيت سوف يعمل على مصدر للتيار المتردد شدته ١١٠ - ١٢٧ ڤولت .

مفتاح الموالف / قدرة داخلة TUNER/EXT IN

يقـــدم إختيـــار ملائم لمصـــادر الڤيـــديو والصـــوت التي سيتم تســـجيلها .

TUNER : الڤيديو والصوت من قسم الموالف . (يضيء مبين القناة .)

EXT IN : قدرة ثميديو وصوت خارجية داخلة من موصلات إدخال الثميديو · AUDIO INPUT وإدخــــال الصــــوت · AUDIO INPUT

(لا يضيء مبين القناة .)

مفتاح إختبار الاشارة TEST SIGNAL

أدر مفتاح الاشارة إلى وضع التشغيل "ON" ، ستشاهد شكلًا باللونين الأبيض والأسود على شاشة جهاز التلفزيون .

قم باجراء تعديل على ضبط القناة بجهاز التلڤزيون حتى يظهر الشكل في أفضل صورة .

موصل إدخال الهوائي ANT IN

يجب توصيل سلك الايريال من الهوائى إلى موصل القدرة الداخلة هذا ذو المقاومـــة ٧٥ أوم .

موصل إخسراج الهوائي ANT OUT

موصل إدخال القيديو VIDEO INPUT

يتقبل هذا الموصل إشارة ثيديو قياسية ١٠٠ ثولت ٧٥، p-p أوم من كاميرا أو من أى مصدر ثيديو آخر من أجل التسجيل . إستخدم سلك متحد المحسور مع قابس من الطراز BNC من أجل إجراء هذا التوصيل . ويمكن إستخدام موصل إدخال القيديو VIDEO INPUT عندما يتم تحويل مفتاح الموالف / قدرة داخلــــة CXT IN

موصل إدخال الصوت AUDIO INPUT

يتقبل هذا المقبس الفونو إشارة صوت ٢٤ر٠ ثولت .r.m.s ، عالية المقاومة من خالط أصوات أو أى مصدر آخر وذلك من أجل التسجيل . إستخدم سلك متحد المحور مع قابس فونو من أجل إجراء هذا التوصيل .

موصل إخسراج القيديو VIDEO OUTPUT

إشارات الڤيديو التي يتم تسجيلها أو مشاهدتها هي في المتناول من هذا الموصل من أجل المراقبة . مستوى القدرة الحارجة هو ١٠٠ قولت p-p في ٧٥ أوم . إستخدم سلك متحد المحور مع قابس من الطراز BNC من أجل إجراء هذا التوصيل .

موصل إخسراج الصوت AUDIO OUTPUT


إشارات الصوت التي يتم تسجيلها أو سماعها هي في المتناول من هذا المقبس الفونو من أجل المراقبة . مستوى القدرة الخارجة هو ٢٤٠٠ قولت . r.m.s ك . إستخدم سلك متحد المحسور مع قابس فونو من أجل إجراء هذا التوصيل .

مسمار ضبط القناة CHANNEL ADJUSTMENT

قناة القدرة الحارجة للتردد اللاسلكى RF هى مضبوطة تماماً على القناة ٣٦ UHF وذلك بواسطة المصنع ، ولذلك فانه يوصى باستخدام هذه القناة .

إذا كانت القناة ٣٦ مستخدمة بواسطة محطة تلڤزيون تجارية في منطقتك ، فاختـــر واحدة من قنوات الاذاعة الغير مستخدمة من ٣٠ إلى ٣٩ بجهاز التلڤزيون .

تعریف و تشغیل مفاتی ح التحکم (د)

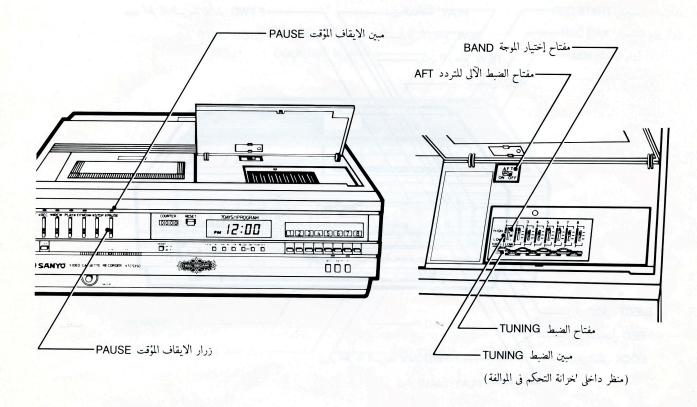

زرار الايقاف المؤقت PAUSE

عند الضغط على هذا الزرار ، فان مبين الايقاف المؤقت PAUSE سيومض وسيتوقف الشريط عن الحركة . إذا تم الضغط عليه أثناء التسجيل ، فان مسجل الشيديو سيكون في وضع الايقاف المؤقت ، ومن الممكن عند ذلك إستقطاع الاعلانات والأجزاء الأخرى الغير ضرورية من البرنامج . عند الضغط على هذا الزرار مرة ثانية ، فان مسجل الشيديو سيعود إلى وضع التسجيل . وإذا تم الضغط على زرار الايقاف المؤقت PAUSE أثناء المشاهدة ، فان الصوت سيتلاشى وتظل الصورة واضحة (أبيض وأسود) . وعند الضبط على الزرار مرة ثانية ، فان مسجل الشيديو سيعود الى وضع المشاهدة .

لمنع حدوث ضرر لضبط شريط الثميديو ، فان خاصية الايقاف المؤقت PAUSE لا يجب أن تستخدم لأكثر من ثلاث دقائق في كل مرة .

ملحوظة : إذا ظل مسجل الڤيديو فى وضع الايقاف المؤقت PAUSE لمدة ٥ دقائق تقريباً ، فانه سيتحول آلياً إلى وضع الايقاف وذلك من أجل حماية الشريط .

مبين الايقاف المؤقت PAUSE

يومض عندما يكون مسجل الڤيديو في وضع الايقاف المؤقت PAUSE .

مفتاح الضبط الآلي للتردد AFT

يحافظ هذا المفتاح إلكترونياً على أفضل ضبط دقيق . ويجب أن يكون في وضع التشغيل "ON" إلى عند إجراء تعديل على الضبط الدقيق (باستخدام مفاتيح التحكم في الضبط) .

مفتاح إختيار الموجة BAND

يسمح لك باختيار الموجة التي تريدها .

ا : القناة ٢ إلى القناة ٤

اا : القناة ٥ إلى القناة ١٢

U : القناة ٢١ إلى القناة ٦٩


مفتاح الضبط TUNING

عندما يتم الضغط على مفتاح إختيار القناة المطابق ، فانه يمكن ضبط محطة التلڤزيون المطلوبة .

مبين الضبط TUNING

كل موجة قناة موضحة على هذا المبين . بادارة مفتاح الضبط ، فان مبين الضبط سيتحرك تبعاً لذلك .

تعریف و تشغیل مفاتیح التحکم (ج)

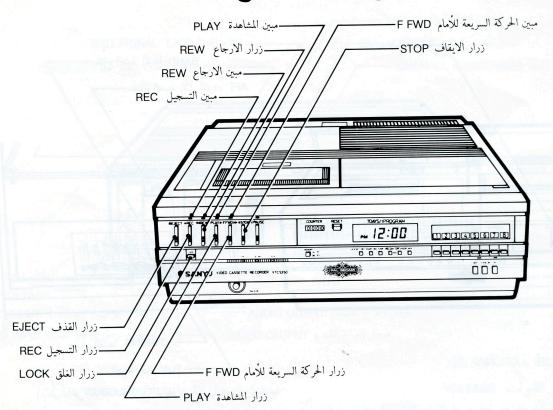

زرار القذف EJECT

يفتح غطاء تحميل الكاسيت ليسمح بادخال وإخراج الكاسيت . يمكن قذف الكاسيتات في أي وقت خلال البرنامج وذلك بدون إرجاع من أجل التغيير السريع للكاسيت .

زرار التسجيل REC

بعد أن يتم إدخال الكاسيت ، وعند الضغط بالترتيب على زرار الغلق وزرار التسجيل ، فان مبين التسجيل . إذا كان طرف الڤيديو فان مبين التسجيل . إذا كان طرف الڤيديو كاسيت قد نزع من مكانه ، فان مبين التسجيل REC سوف يومض ليوضح أن مسجل الڤيديو لا يستطيع أن يصبح في وضع التسجيل .

مبين التسجيل REC

يضى، عندما يكون مسجل الڤيديو في وضع التسجيل .

زرار الغلق LOCK

لا يستطيع زرار التسجيل REC أن يقوم بتشغيل مسجل القيديو وذلك إذا ضغط عليه وحده . إنه يعهم فقصط عندما يضغط عليه مصع زرار الغلق LOCK . إذا تم الضغط على زرار التسجيل REC عن طريق الخطأ ، فان مسجل القيديو لن يأخذ وضع التسجيل وبذلك يمنع من حدوث مسح للشريط . ويعمل زرار الغلق لحذ وضع التسجيل وبذلك يمنع من حدوث مسح للشريط . ولا يحتاج زرار لحد للله المنطق عليه وإطلاقه . ولا يحتاج زرار التسجيل REC أن يضغط عليه في نفس الوقت على ما هو مطلوب عمله هو أن تضغط عليه خلال ثانية واحدة بعد أن يتم إطلاق زرار الغلق XOCK .

زرار الارجاع REW

عند الضغط على هذا الزرار ، فان مبين الارجاع REW سيضى، وسيتحرك الشريط للخلف بسرعة عالية .

مبين الارجاع REW

يضىء عندما يكون مسجّل الڤيديو في وضع الارجاع REW .

زرار المشاهدة PLAY

عند الضغط على هـــذا الزرار ، فان مبين المشــاهدة PLAY ســيضى، وســيتم عرض الثيديو كاسيت السابق تسجيله .

مبين المساهدة PLAY

يضى. عندما يكون مسجل الڤيديو في وضع المشاهدة PLAY .

زرار الحوكة السريعة للأمام F FWD


عند الضغط على هذا الزرار ، فان مبين الحركة السريعة للأمام F FWD سيضى. وسيتحرك الشريط للأمام بسرعة عالية .

مبين الحركة السريعة للأمام FFWD

يضى عندما يكون مسجل الڤيديو فى وضع الحركة السريعة للأمام F FWD . زرار ا**لايقاف STOP**

عند الضغط على هذا الزرار أثناء التشغيل ، فان الشريط سيتوقف عن الحركة وستتوقف كل وظائف الجهاز .

تعریف و تشغیل مفاتیح التحکم (ب)

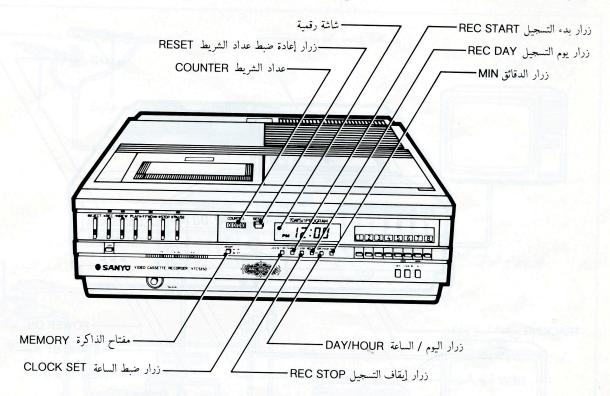

الشاشة الرقمية

توضح الوقت فى اليوم . عند الضغط على زرار بدء التسجيل REC START ، فهى توضح وقت بداية التسجيل الآلى . وعند الضغط على زرار إيقاف التسجيل REC STOP ، فهى توضح وقت إنتهاء التسجيل الآلى . وعند الضغط على زرار يوم التسجيل الآلى .

زرار ضبط الساعة CLOCK SET

عند توصيل السلك الرئيسي ، فان الأرقام "AM 12:00" سوف تظهر وتبدأ في الوميض .

أضبط أولاً توقيت الساعة بدقة وذلك بالضغط على زرار ضبط الساعة DAY/HOUR في نفس الوقت مع زرار اليوم / الساعة DAY/HOUR أو زرار الدقائق

زرار بدء التسجيل REC START

أثناء الضغط على هذا الزرار ، إضغط على زرار اليوم / الساعة DAY/HOUR أو زرار الدقائق MIN وذلك من أجل ضبط وقت بداية التسجيل الآلي .

زرار إيقاف التسجيل REC STOP

أثناء الضغط على هذا الزرار ، إضغط على زرار اليوم / الساعة DAY/HOUR أو زرار الدقائق MIN وذلك من أجل ضبط وقت إنتهاء التسجيل الآلى .

زرار يوم التسجيل REC DAY

أثناء الضغط على هذا الزرار ، إضغط على زرار اليوم / الساعة DAY/HOUR وذلك من أجل ضبط يوم التسجيل الآلي .

زرار اليوم / الساعة DAY/HOUR

أثناء الضغط على أى من أزرار ضبط الساعة CLOCK SET ، بدء التسجيل REC STOP . أوضغط برقة على زرار اليوم / الساعة مرة واحدة ، وعند ذلك فان الساعة أو مبين المؤقت سوف يتحرك ساعة واحدة . حافظ على زرار اليوم / الساعة DAY/HOUR مضغوطاً ، ذلك سوف يجعل التوقيت بالشاشة يتغير بسرعة ٤ ساعات في الثانية .

أثناء الضغط على زرار يوم التسجيل REC DAY ، إضغط برقة على زرار اليوم / الساعة DAY/HOUR مرة واحدة ، وعند ذلك فان يوم التسجيل الآلي سوف يتحرك يوماً واحداً . حافظ على زرار اليوم / الساعة DAY/HOUR مضغوطاً ، ذلك سوف يجعل اليوم بالشاشة يتغير بسرعة ثلاث أيام في الثانية .

زرار الدقائق MIN

أثناء الضغط على أى من أزرار ضبط الساعة CLOCK SET ، بدء التسجيل أثناء الضغط على أى من أزرار ضبط الساعة (REC STOP ، إضغط برقة على زرار الدقائق MIN مرة واحدة ، وعند ذلك فان الساعة أو مبين المؤقت سوف يتحرك دقيقة واحدة . حافظ على زرار الدقائق MIN مضغوطاً ، ذلك سوف يجعل التوقيت بالشاشة يتغير بسرعة ٨ دقائق في الثانية .


عداد الشريط COUNTER

يوضح موضع الشريط . ويستخدم ليحدد موقع نقطة محددة على الشريط .

زرار إعادة ضبط عداد الشريط

إضغط عليه من أجل إعادة ضبط العداد COUNTER إلى الوضع "0000" .

تعريف وتشغيل مفاتيح التحكم (أ)

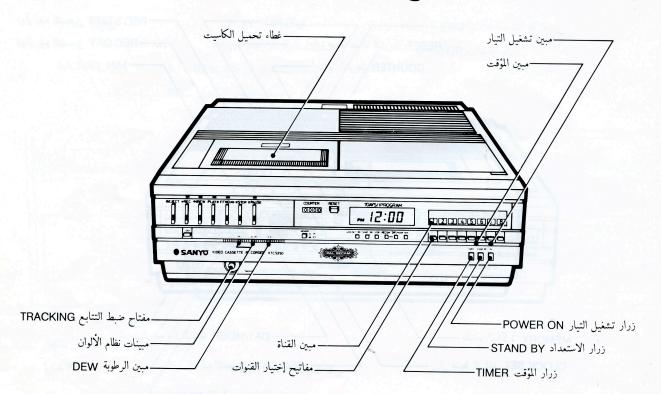

زرار تشغيل التيار POWER ON

بالضغط على هذا الزرار ، فان مسجل الڤيديو سوف يتحول إلى وضع التشغيل . ملحوظة : مفتاح القدرة لهذا الجهاز متصل بالدوائر الثانوية ولا يقوم بفصل الجهاز عن قدرة التيار المتردد حتى ولو كان المفتاح في وضع الايقاف (الاستعداد) وذلك طالما كان سلك التيار المتردد متصلاً بمصدر للتيار المتردد .

مبين تشغيل التيار

يضيء عندما يكون زرار تشغيل التيار POWER ON مضغوطاً .

زرار الاستعداد STAND BY

بالضغط على هذا الزرار "، فان مسجل الڤيديو سوف يتحول إلى وضع الايقاف . فيما عدا الساعة .

زرار المؤقت TIMER

بالضغط على هذا الزرار ، فان مسجل الڤيديو سوف يكون في وضع التسجيل بالمؤقت . وسوف يتحول إلى وضع التشغيل ووضع الايقاف آلياً .

مبين المؤقت

يضي، عندما يكون زرار المؤقت TIMER مضغوطاً .

غطاء تحميل الكاسيت

يتقبل كاسيتات ڤيديو للتحميل الآلى للشريط . من أجل فتح الغطاء لادخال كاسيت إضغط على زرار القذف EJECT . يجب إدخال الكاسيت داخل الغطاء فى الاتجاه الموضح بالسهم على الكاسيت . ويجب دفع الكاسيت فى الغطاء إلى الداخل بقـــدر الامكان ويقفل الغطاء بالصغط عليه لأسفل باحكام . ويستغرق تحميل الشريط ٤ ثوانى تقريباً .

مفتاح ضبط التتابع TRACKING

عادة يستخدم فقط عند عرض كاسيت قد تم تسجيله على مسجل آخر ، وهذا المفتاح يقدم ضبطاً ملائماً لتتابع رأس الڤيديو من أجل صور خالية من التشويه . إذا لوحظ حدوث تشويه في التتابع (على شكل تشويه ضيق أفقى عبر الصورة) ، فقم بضبط التتابع وذلك بادارة مفتاح ضبط التتابع في وضع المنتصف (العلامة) عند عرض شرائط ويجب أن يظل مفتاح ضبط التتابع في وضع المنتصف (العلامة) عند عرض شرائط كاسيت مسجلة على نفس الجهاز .

مبينات نظام الألوان

تضى، هذه المبينات ، كما هو موضح أسفله ، لتوضح أى نظام للألوان مستخدم بواسطة مسجل الڤيديو كاسيت .

"PAL" : توضح أن النظام پال PAL هو المستخدم للتسجيل أو للعرض.

"SECAM" : توضح أن النظام سيكام SECAM هو المستخدم للتسجيل أو للعرض.

مبين الرطوبة DEW

يضى، ليوضح التكاثف على آليات مسجل الڤيديو كاسيت . ولا يعمل مسجل الڤيديو كاسيت إلا عندما ينطفى، هذا المبين .


مبين القناة

مصباح المبين يدعك تعرف أي قناة تقوم بتسجيلها .

مفاتيح إختيار القنوات

يمكن تخرين ٨ محطات تلڤريون مختلفة ويمكن إسترجاع كل منها على حدة وذلك بالضغط على مفاتيح إختيار القنوات .

ركيب وتوصيل المسجل

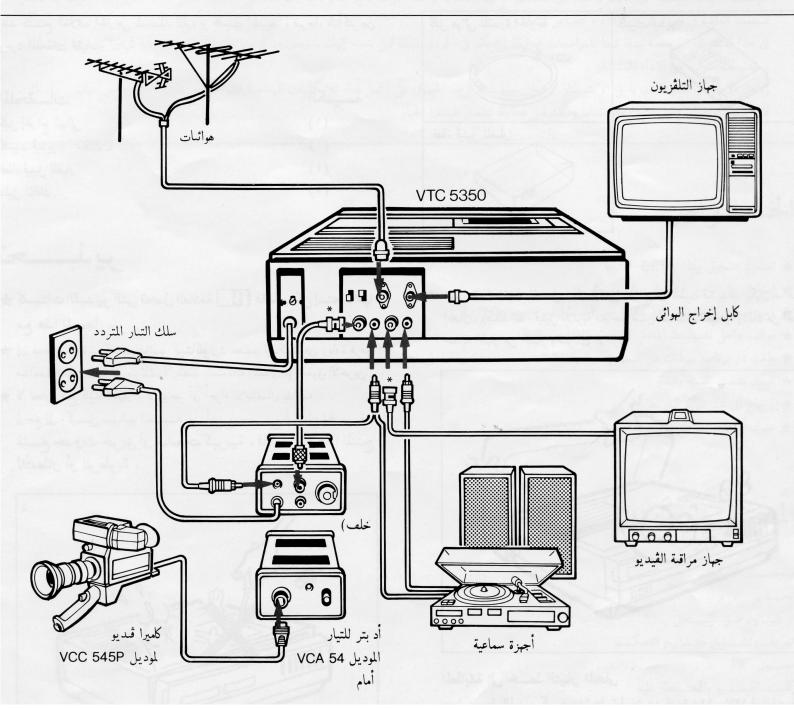


الملحقات المتواجدة

عند فتـــح الغلاف الخارجي لمسجلك الڤيديو كاسيت الجديد ، فبرجاء التأكد من وجود الملحقات القياسية التالية :

الكمية	الملحقات
(1)	كابل إخراج الهوائي
(1)	كاسيت ڤيديو ، 250-L
(1)	غطاء ڤينيل للغبار
(1)	دليل المالك

- ★ كاسيتات الثيديو التي تحمل العلامة [B] فقط يمكن إستخدامها مع هذا المسجل .
- ★ إن مسجل الثيديو كاسيت سانيو بيتاكورد مصمم ليمكنك من زيادة فرص مشاهدة التلڤزيون داخل منزلك ولا يقصد باستعماله التعدى على حقوق الآخرين .
- ★ لا تحاول فتح كابينة الجهاز . لا يوجد أى أجزاء للاستعمال بداخله .
 إرجع إلى وكيل سانيو المعتمد من أجل جميع أنواع الخدمة .
 لمنع حدوث حريق أو صدمات كهربية ، فلا تعرض هذا المنتج للأمطار أو الرطوبة .

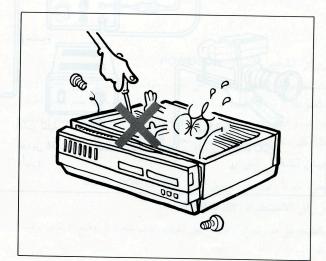


★نظام التيار


التوصيل إلى مصادر التيار

إن قُولت التشغيل لمسجل الڤيديو كاسيت هذا قد سبق ضبطه بالمصنع على تيار متردد ٢٤٠ قُولت . قبل التوصيل إلى مصادر التيار ، إختبر أن مفتاح إختيار الڤولت باللوحة الخلفية مضبوط على نفس قُولت مصادر التيار بمنطقتك .

★ قم باختيار مكان مناسب من أجل مسجلك الثيديو كاسيت ، ولكن تجنب إستخدام الأماكن الحارة أو الباردة جداً أو كثيرة الغبار . إسمح بمرور الهواء عند قاع وأعلى وجوانب وظهر الجهاز . إن رؤوس التسجيل الدوارة والثابتة هي أيضاً حساسة للمجالات المغناطيسية . حاذر من وضع المسجل بجوار محركات ، أو محولات أو أي أجهزة أخرى تقوم بتوليد مجالات مغناطيسية قوية . هذا المنتج مصمم من أجل الاستخدام في الوضع الأفقى فقط .

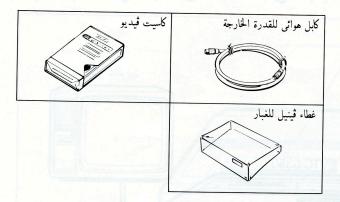

★ عند عدم إستخدام المسجل ، فانه يُوصى باخراج أى كاسيت ثيديو قد يكون بداخل الجباز . وهناك غطاء ثينيل للأتربة متواجد ضمن الملحقات القياسية وذلك من أجل حماية الجباز من الغبار والملوثات الأخرى .

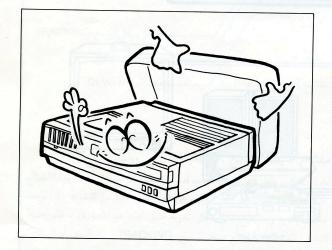


المطابقة إلى خط التيار المحلى

يعمل مسجل الڤيديو كاسيت هذا على تيار متردد قدرة ١١٠ ـ ١٢٧ ڤـــولت أو ٢٢٠ ـ ٢٤٠ ڤولت .

ضع مفتـاح إختيار الڤولت (إرجع للى صفحة ٨) على الوضـــع الملائم وذلـــك باستخدام مفك ذو طرف مســتوى .

"H" : ضع مفتـاح الاختيار على هذا الوضـع إذا كان ڤولت مصدر التيار المتردد ٢٢٠ ـ ٢٤٠ ڤولت .

"L" : ضع مفتـاح الاختيار على هذا الوضع إذا كان ڤولت مصدر التيار المتردد 110 - 177 ڤولت .

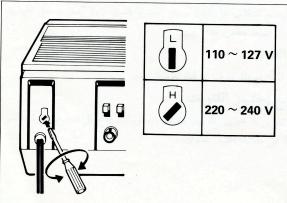

تهنئية . إنك أصبحت الآن مالكاً لواحدة من المنتجات الرائعة المصنوعة بواسطة شركة سانيو الكهربائية ، الرائدة على المستوى العالمي في الألكترونيات . حيث أننا نفتخر بسمعتنا العالمية في جودة الانتاج والأداء الصناعي المتطور . إن هذا المنتج قد تم فحصه بدقة تبعاً للمواصفات الدقيقة للتحكم في الجودة وذلك قبل شحنه إليك . ونحن متأكدون أنك إذا أعطيته العناية المعقولة فسوف تجد أنسسيقدم لك سنوات من الأداء الممتاز . وبأخذ الاستثمار الذي قمت به في الاعتبار ، فنحن نعلم أنك تريد الحصول على أكمل أداء للإمكانيات الهندسية المتواجدة في جهازك الجديد من سانيو . ولذلك ، فاننا نوصيك بقراءة دليل المالك هذا تماماً وذلك قبل محاولة تشغيل هذا الجهاز .

الخواص

المشهور	RETA	1-	1 -		
المسهور	DEIA	سا	سسحسا	4401	•

- ★ إستقبال على نظامين قياسيين : پال وسيكام
- ★ زمن تسجيل ٣ ساعات و١٥ دقيقة مع كاسيت ڤيديو مدمج
 - ★ موالف داخلي للضبــط المسبق لقنوات VHF و UHF
- ★ مؤقت ذو برنامج يمكنك من التسجيل مرة واحدة أثناء عدم وجودك وذلك في خلال ٧ أيام
 - ★ آليات تشغيل بلمسة رقيقة
 - ★ إرجاع آلي عند نهاية الشريط
 - ★ عداد آلي للشريط مع ذاكرة للوضع "0000"

المحتويات

٢																																											
۲		7	•	i		•			ŗ,		•				•	•	٠	•	•	٠	٠	٠	٠	٠	•	•		٠		٠	٠	٠						ىد ة	تواج	ت الم	_ار	حق	Ш
					•	•	•	•	•	•	•	•	٠	•		•	•		•	٠										v.											. ;		
٤																			•																						د پر		_
٤																					ė	4		•		ď	•	į		•	Ė	•	•		•	J			بل ا.	نوصي	ب و	کیہ	تر
4										Ť							•		•			•	Ė				•	٠	٠	٠	٠	6		تحا	ح ال	اتيح	_	ل مف	غيل	نشــ	ب و	ريف	تع
							•	•	•		•	•	•	•	•	•	•	•																						RE	1		
		100	7	Test		15	170	-							•	•												٠.						a.lo	اله	افخ	~	11.		1	11:		K
	- 1				•	•	•	•	•	•	•	•	٠	•	٠	•	٠			•	•																	:	icl	1	1 1		
11					ij.														'n													Ì	Ŀ						-		1	•	ص
18																		Ġ.	ď		4	÷	de la companya de la				Ċ				·	÷		•	ن	ز يوا	_	التله	=	_ام_	ل بر	سجي	ت
18																	•				ľ	٠		•		4-7						•		_ه	ىيل	نسج	بق أ	ن س	سيت	ة كا	امد		مـ:
		•	•						•	•	•	•	٠	•				•							٦.										1	÷	1	K		1			-11
																																	.1		1	1	. ;			11	1.		
						-	•								•	•			•											2						1:	11		(1-	1		. 1
۱۸																								-									÷		C		البر	٠	ىي	ا و ا	-راج	_	-1
11																						ŀ			•				•	*	٠	ن	5	اخد	الد	. يو		القيه	نت	بمؤة	جيل		11
۲.						•	•			•	•		•		•	•																				1	_		11	١٧١	1		h
		- (1)				•		•	•	•	•	•	٠	•		٠		٠		•																		1:	11 .	1 .			
71	1	10	٠.	•	•	•	•	•	•		•		•		•	•														=		51	i.	1		c .	1	1 0	.1	- 1		1:	
11	٠		•																					'n,												,		,	•	ير جـ الشـ	1.		
22									í.				Ţ																				•	•	•			يط		الشـ	_		۰
77															Ž.	Ò	-		•	•				•	i		•	3.5		•	i	•	ň.	•	•	•				الشــــــــــــــــــــــــــــــــــــ		لصي	1
			i		•				•	•				٠		•																٠.					1	111	.5	أدا		_ ;	
7 2			•			٠		•		•	-		•												ت		رم	۔ فو	_ L	_	. ر	ست	~K	د به		الڤ	ط			ارت.	:	1	Ü



VTC 5350



سانيو مسجل ڤيديو كاسيت ملون

دليل المالك